


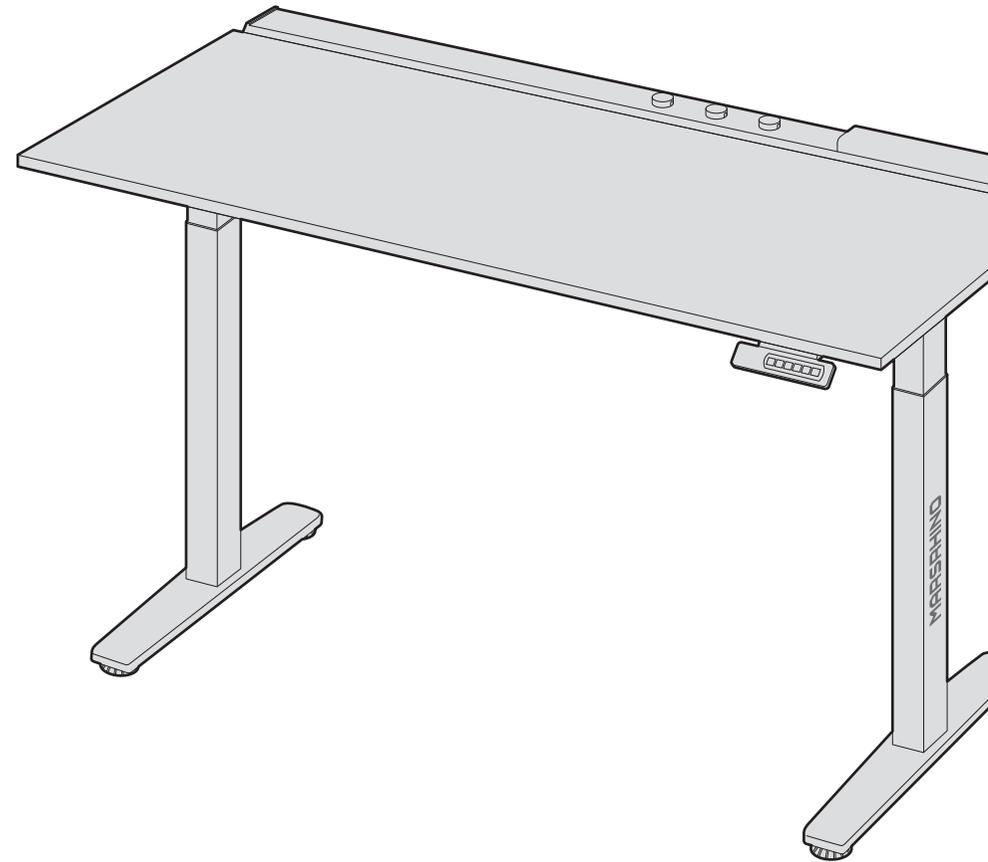

**FIRSPACE**



**FIRSPACE**

領域 超跑電動升降桌

ELECTRIC GAMING DESK

[www.marsrhino.com](http://www.marsrhino.com)

## 目錄 TABLE OF CONTENTS

注意事項	WARNING	
保固說明	WARRANTY AGREEMENT	
清潔方式	HOW TO CLEAN THE ELECTRIC DESK	01 - 02
客戶服務	MANUFACTURER CONTACT	
控制面板	CONTROL PANEL	03 - 04
零件包   組裝配件	ACCESSORY KIT & ASSEMBLY DRAWING	05 - 06
組裝步驟	ASSEMBLING INSTRUCTION	07 - 18

### 注意事項

1. 本產品採用高品質、厚實穩固的結構鋼材與桌板所組成，為避免人身受傷或產品損壞，請至少雙人協同組裝。
2. 組裝過程請避免孩童、寵物靠近，避免發生碰撞或壓傷。
3. 請務必確定對應當地電壓使用。
4. 請依照本產品承重上限使用，切勿超載使用。
5. 操作產品升降時，請確保桌面上方、下方升降空間沒有孩童、寵物及任何障礙物。
6. 請勿讓孩童自行操作與清潔本產品。
7. 請勿倚靠、坐、站立在桌面或以任何不正常的方式使用。
8. 為確保使用安全，請定期檢查螺絲是否有鬆脫的現象。
9. 移動產品擺放位置時，請先把清空桌面物品並降至最低高度，然後以雙人協同搬運，抬放時請小心避免壓腳。
10. 本產品僅適用於乾燥、平坦的室內環境，如遇擺放位置地面不平整，可旋轉腳墊使其穩固。
11. 如果控制盒沒有正確水平固定，會導致升降功能無法正常使用！

### 保固說明

產品保固條件會因購買地區而異，詳細的保固資訊請詳閱官網或洽當地代理商。

非保固範圍條款:

1. 人為損壞、不正常使用或不可抗拒之天災人禍 (例如: 風災、水患、火災、地震、戰爭、雷擊或異常電壓)。
2. 外觀材料的自然老化或正常磨損。
3. 產品序號有重貼、變造、毀損、無法辨識..等情況。
4. 自行或委託未經原廠授權維修之廠商拆卸、改裝或更換非原廠零件。
5. 未按照使用說明書規定操作。
6. 產品本體以外的配件、說明書、包材。

### 清潔方式

1. 先以柔軟的毛巾或棉布沾清水，擰乾後進行擦拭，並避免水分滲入鋼材、電機元件而造成發霉、生鏽或短路。
2. 再以沒沾過水、完全乾燥的毛巾或棉布將表面徹底擦乾，避免表面殘留水分形成水痕、水漬。

### 客戶服務

產品功能、操作有任何問題，歡迎透過客服專線、信箱聯繫或加入火星犀牛FB粉絲專頁詢問。

### WARNING

- Please wear protective gloves when assembling the Desk. It is your own responsibility to use appropriate protection to prevent any physical damage.
- All parts should be checked monthly to confirm their integrity and to make sure that the screws are not loose.
- If any part of the product is or appears to be damaged, do not use the product.

### WARRANTY AGREEMENT

The product warranty period is calculated from date of purchase.

MarsRhino warrants that the product will not have any material or quality defects during the warranty period. If a product requires warranty service, proof of purchase (purchase receipt or invoice) must be produced during the warranty period.

MarsRhino's warranty is limited to providing new parts to repair the product.

When the product cannot be repaired, it may be exchanged for a product with the identical model number. If the product is no longer produced or unavailable, a product with similar functions or specifications may be substituted. The warranty period of the exchanged product is the original product's remaining warranty period, or 90 days, whichever is longer.

This warranty is subject to local laws and regulations.

You also enjoy locally-granted warranty rights.

### WARRANTY NOT APPLICABLE

- Where there has been human error, abnormal use, or force majeure (e.g., storm, flood, fire, earthquake, war, lightning, electrical surges, etc.).
- Damage that naturally and inevitably occurs as a result of normal wear or aging.
- When the product number is reused, modified, damaged, illegible, etc.
- Where there has been disassembly, modification, or replacement of original parts, either oneself or by a merchant not authorized by the original manufacturer.
- Where the product has been used in a manner not in accordance with the instructions.
- To accessories, instructions, and packaging other than the product itself.

### HOW TO CLEAN THE ELECTRIC DESK?


Please wipe with a towel or cotton cloth dampened with clean water, and avoid excessive water infiltration into the desk and cause mold or rust.

### CUSTOMER SERVICE

Please contact the retailer where you purchased the product first, If you still cannot solve the problem, please contact us at the following email address.

Email: rma@marsrhino.com

## 控制面板 CONTROL PANEL

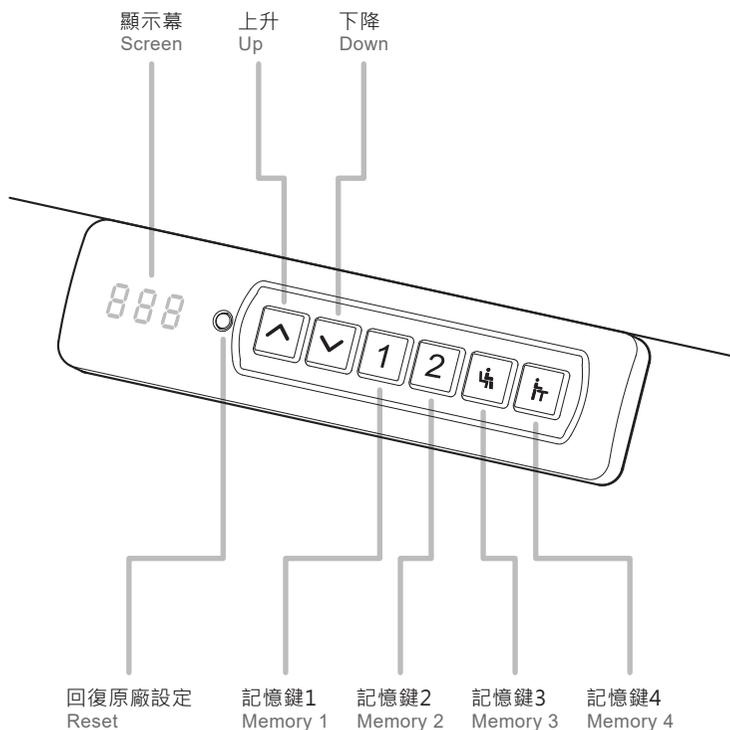

### 1. ^ ▼ : 上升、下降鍵 UP AND DOWN

自由調節上升、下降高度。升降範圍：72~122公分(不含桌板厚度)。

Adjust the up and down heights freely. The lifting range is from 72 to 122 cm (excluding the thickness of the tabletop).

1. 長按 ^ 鍵 3 秒後放開，桌面將自動升至最高位置。

2. 長按 ▼ 鍵 3 秒後放開，桌面將自動降至最低位置。

1. Press and hold the ^ button for 3 seconds, then release it to automatically raise the table to its highest position.

2. Press and hold the ▼ button for 3 seconds, then release it to automatically lower the table to its lowest position.

### 2. 高度記憶 MEMORY SYSTEM

1. 先將桌子手動上升或下降到想要記憶的高度。

2. 長按任一個記憶鍵3秒，顯示幕開始閃爍即表示設定成功。

Move the table to the desired position, then press and hold the button for 3 seconds. The screen will flash, indicating that the setting is saved successfully.

記憶鍵1：預設為最高高度。

記憶鍵2：預設為最低高度。

記憶鍵3：預設為80公分。

記憶鍵4：預設為100公分。

The Memory 1 button is set to the maximum height by default.

The Memory 2 button is set to the minimum height by default.

The Memory 3 button is set to 80 cm height by default.

The Memory 4 button is set to 100 cm height by default.

### 3. 安全鎖功能 LOCK FUNCTION

先同時長按 ^ 與 ▼ 鍵 5 秒，螢幕顯示「LOC」代表已啟動安全鎖。

再次執行相同步驟（長按兩鍵 5 秒）即可解除安全鎖。

Press and hold the ^ and ▼ buttons together for 5 seconds. The screen will display "LOC", indicating that the child lock is activated.

Repeat the same operation (press and hold both buttons for 5 seconds) to deactivate the child lock.

### 4. 回復出廠設定 RESET OPERATION

長按（回復原廠設定鍵）5 秒後放開。

Press and hold the Rest button for 5 seconds, then release it to enter reset mode.

零件包 **ACCESSORY KIT**

**S1**<sub>x1</sub>




**S2**<sub>x18</sub>



**S3**<sub>x8</sub>




**S4**<sub>x4</sub>

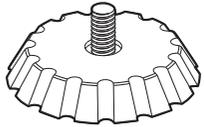


**S5**<sub>x28</sub>



 
**S6**<sub>x9</sub>




**F**

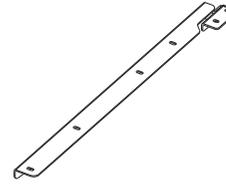


**L**

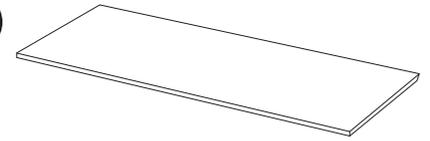


**G**

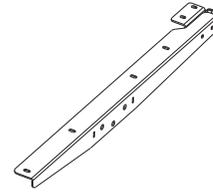


**M**

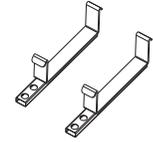

**H**

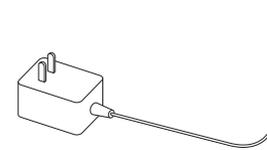


**N**

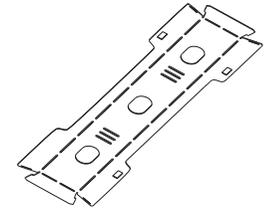


組裝配件  
**ASSEMBLY DRAWING**


**C**

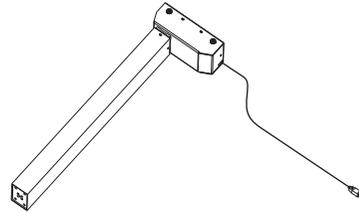


**A**

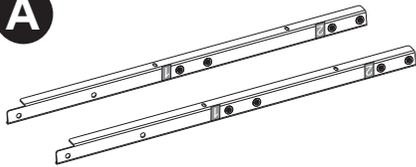


**D**

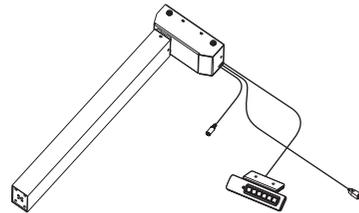


**B**

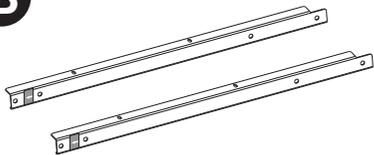


**E**

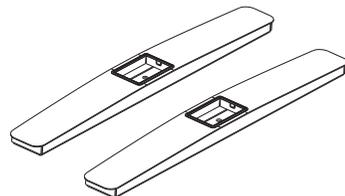

**I**

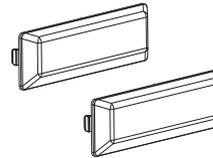


**O**

 


**J**



 
**P**




**K**

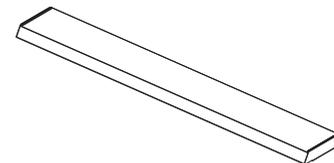

**Q**

 

1

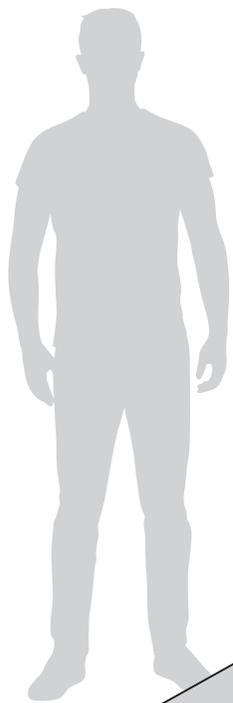


建議雙人進行組裝。  
Recommended two people to assemble.




組裝前先請詳閱說明書，  
並核對組裝零配件是否齊全。  
Please read this manual  
carefully before installing.



組裝螺絲時請確實鎖緊，  
避免產生搖晃與異音。  
Be sure to tighten the  
screws firmly

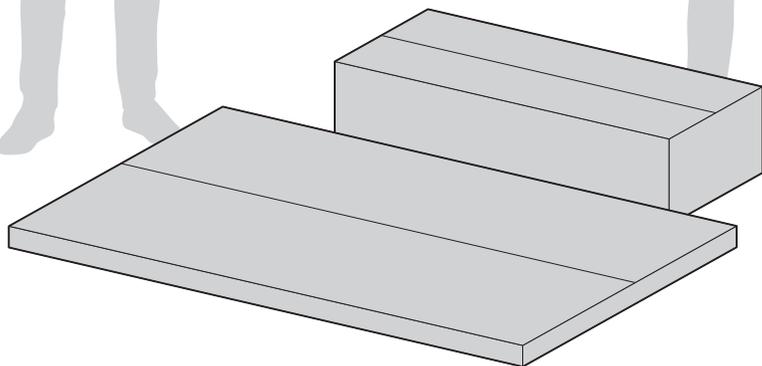


2

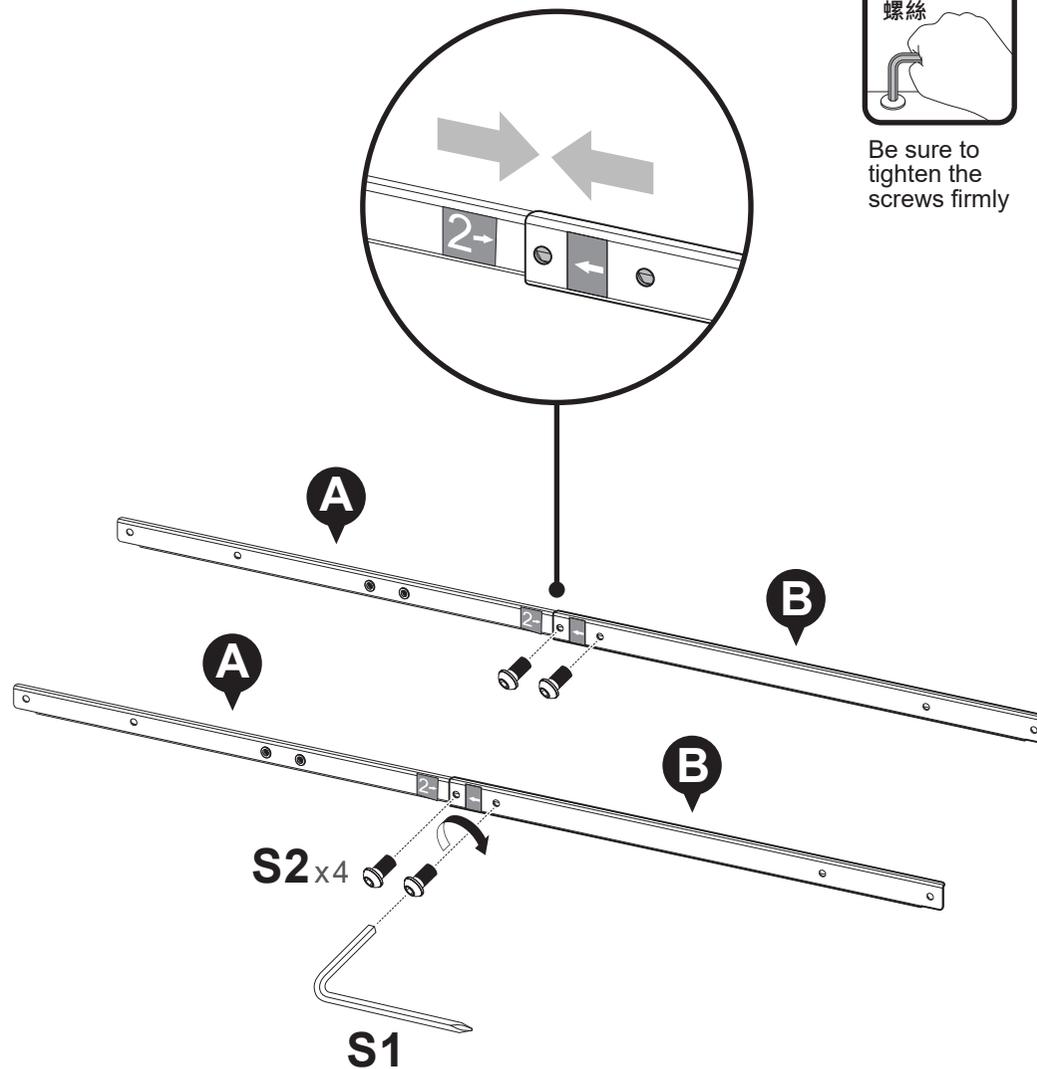

請確實鎖緊  
螺絲

Be sure to  
tighten the  
screws firmly

3

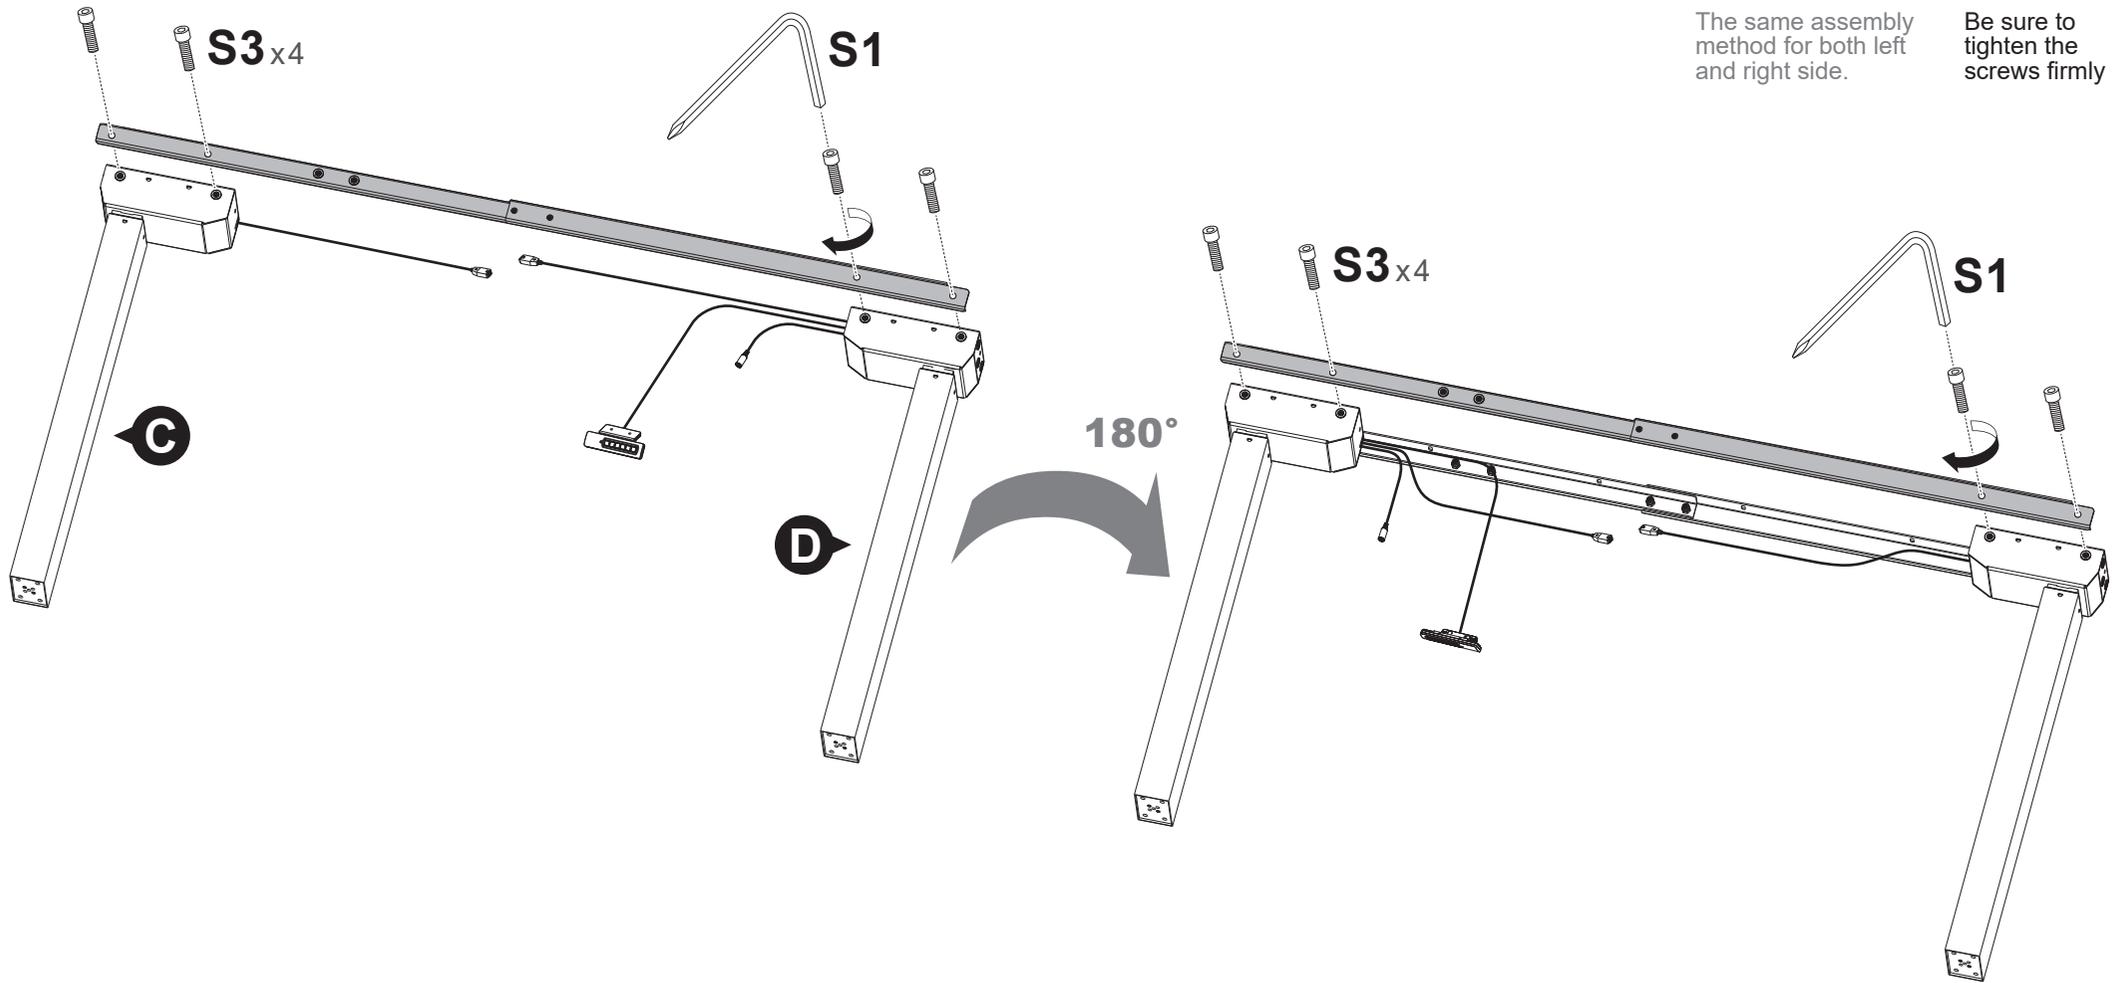

兩側組裝  
方式相同



The same assembly  
method for both left  
and right side.




請確實鎖緊  
螺絲

Be sure to  
tighten the  
screws firmly


4

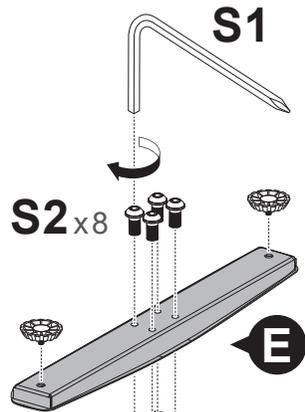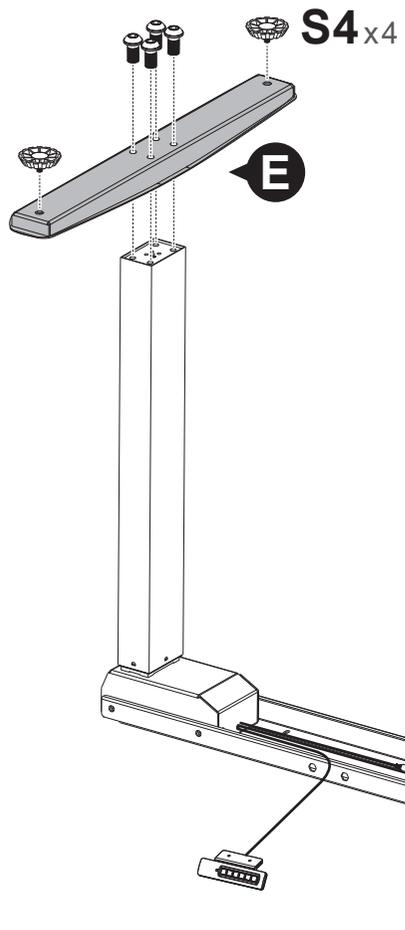



5-1

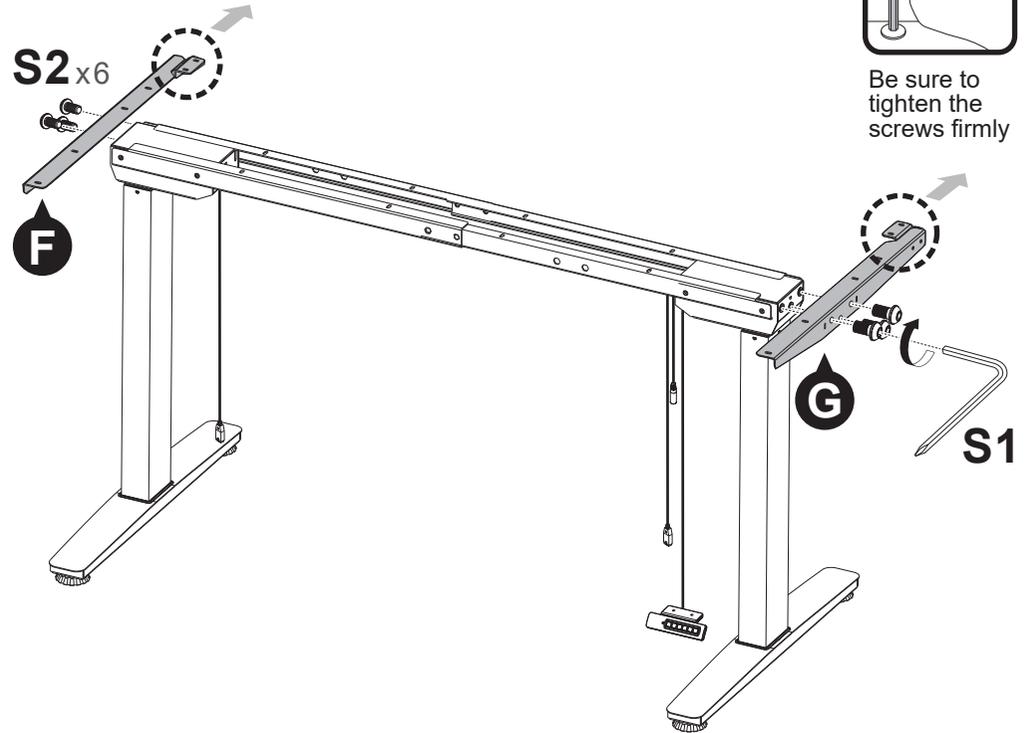


5-2

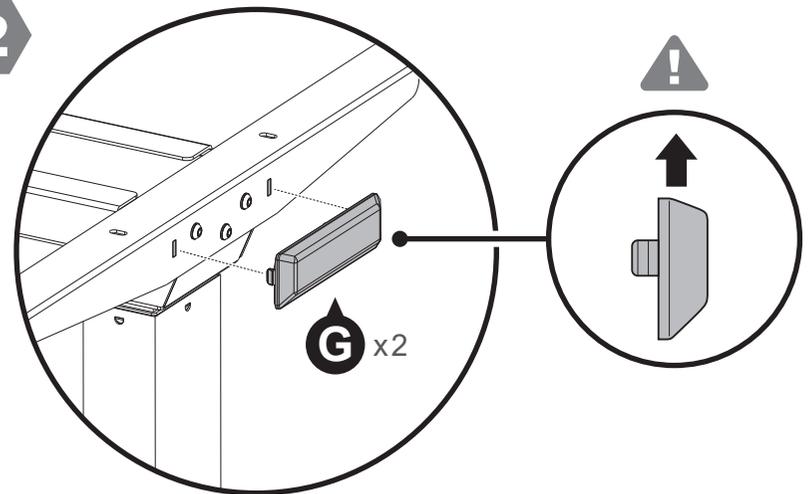

6

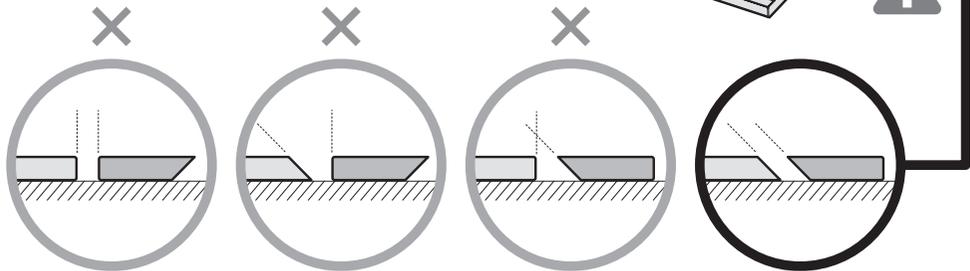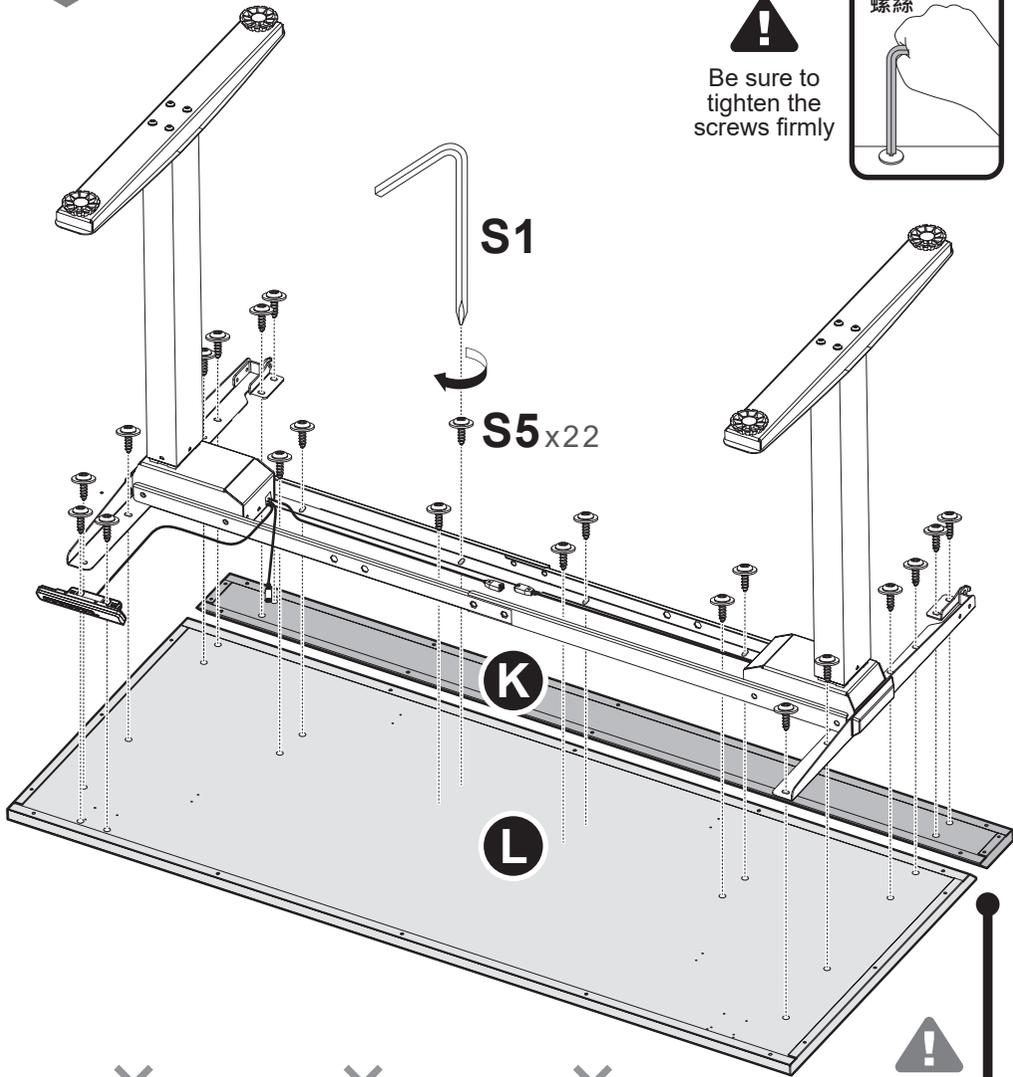


7

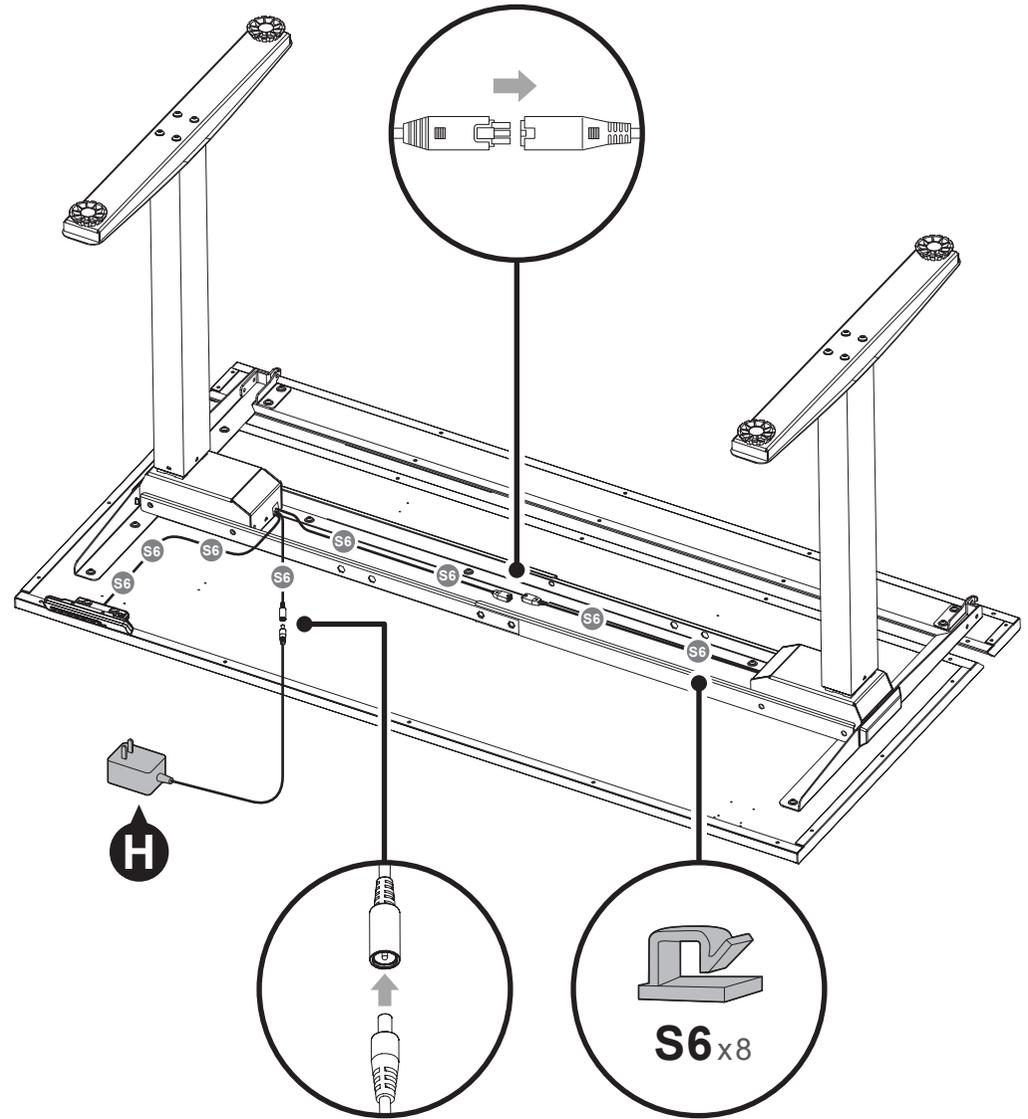


8


! Be sure to tighten the screws firmly

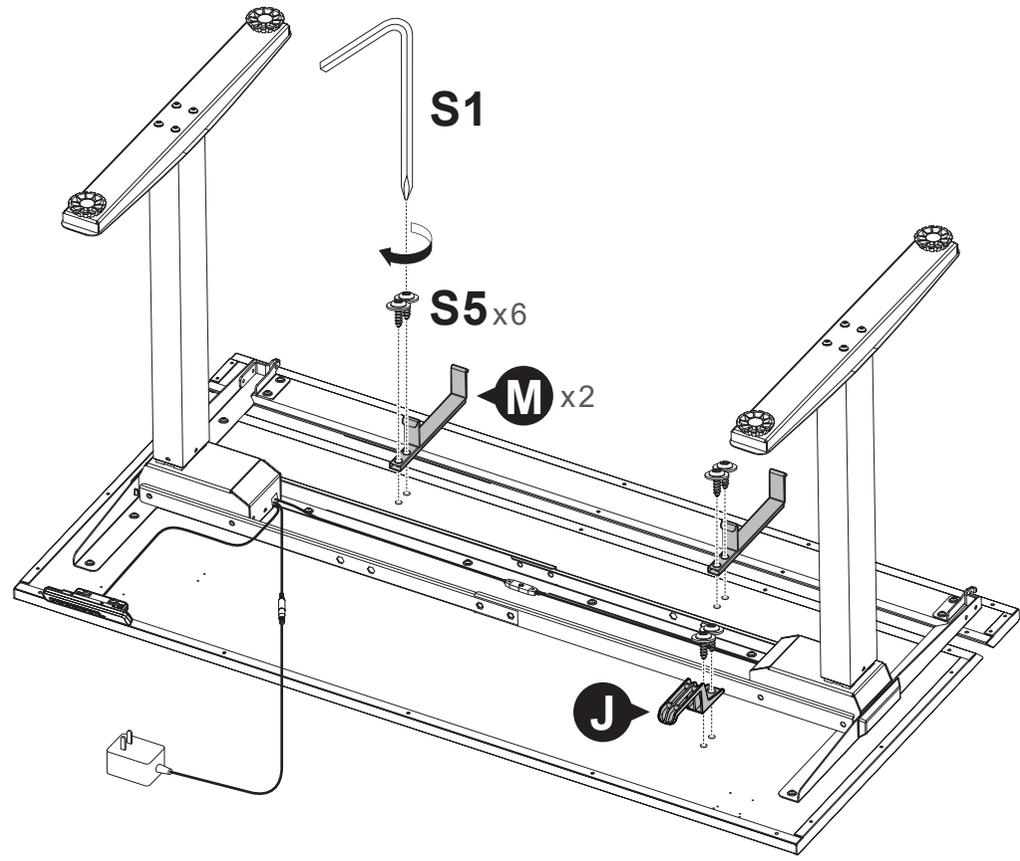

9

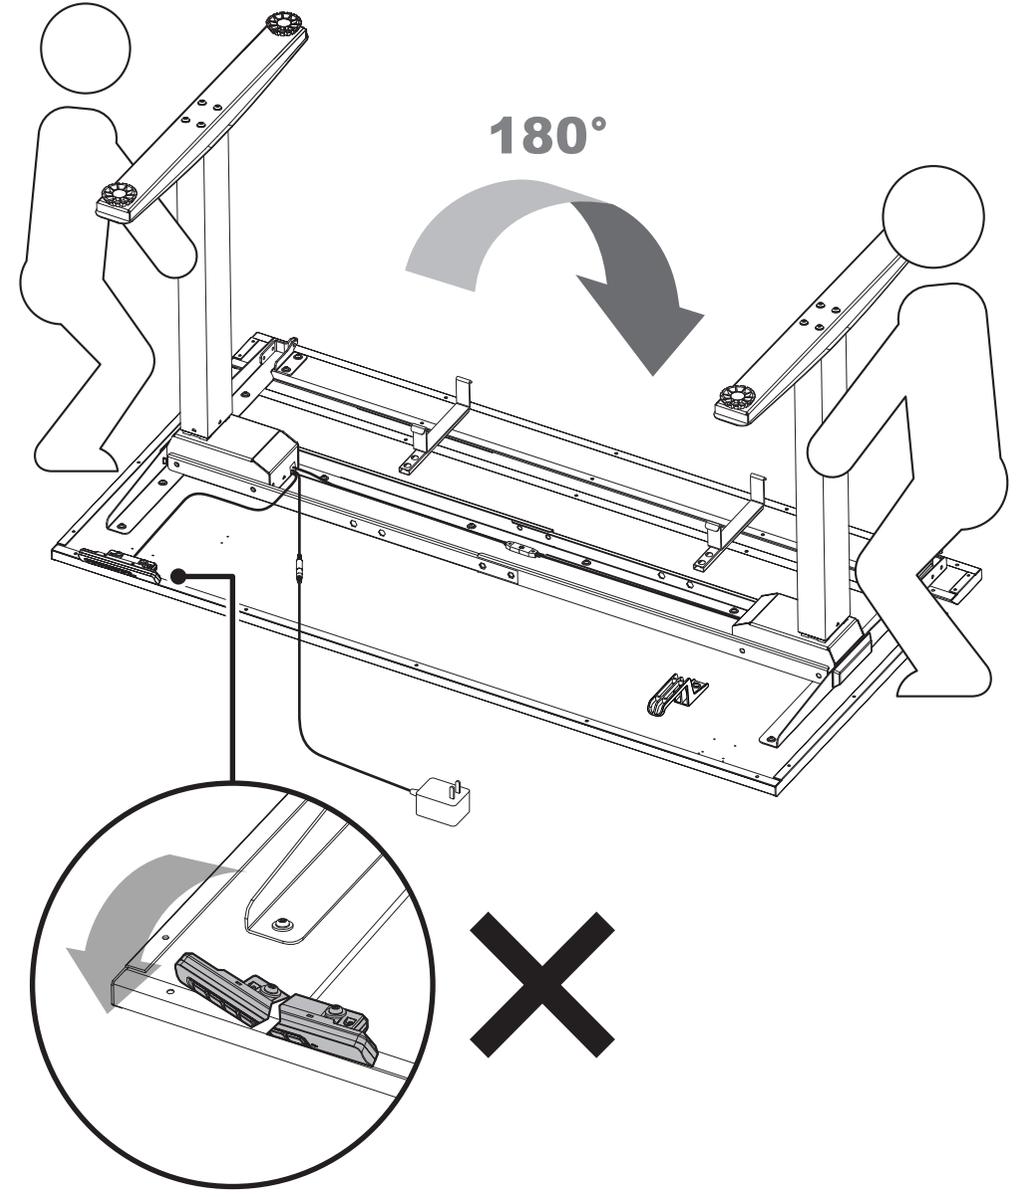


10-1

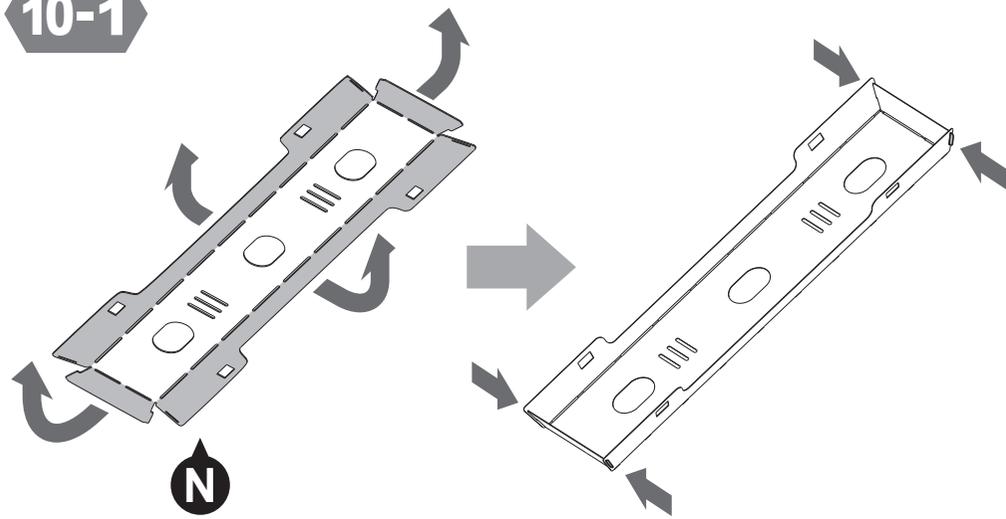


N

10-2

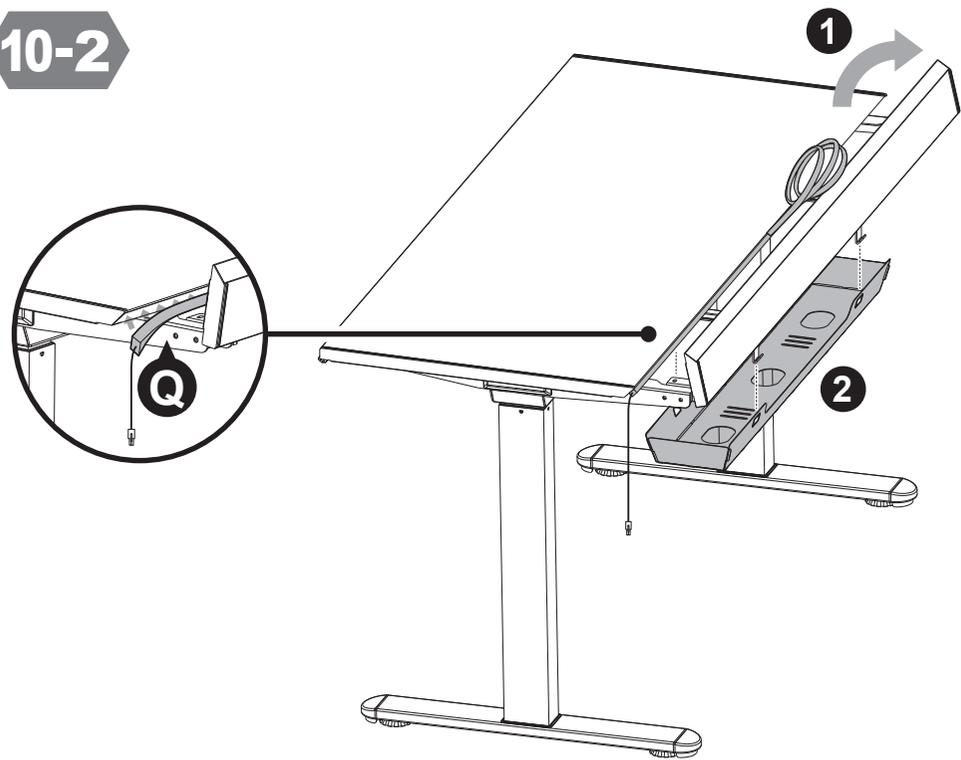

Q

11

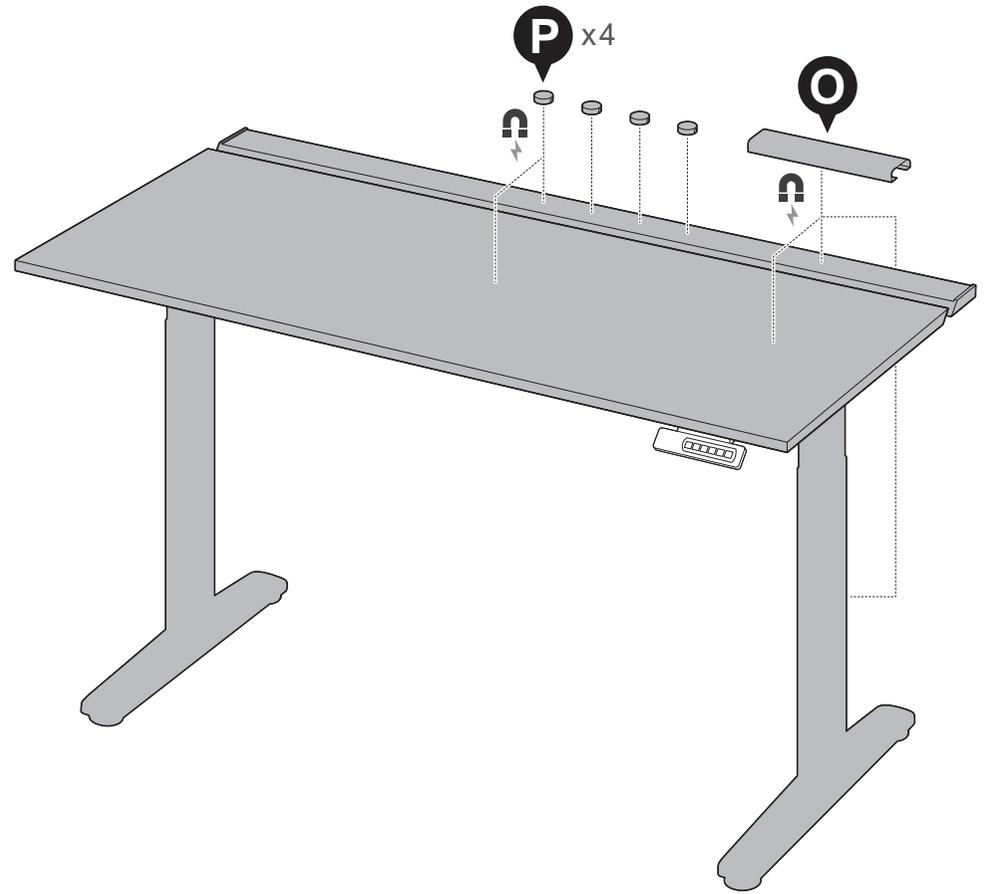

P x4

O