



DEFENDER

www.marsrhino.com



DEFENDER

天行者 超跑電動升降桌

ELECTRIC GAMING DESK

目錄 TABLE OF CONTENTS

注意事項	WARNING	
保固說明	WARRANTY AGREEMENT	
清潔方式	HOW TO CLEAN THE ELECTRIC DESK	01 - 02
客戶服務	MANUFACTURER CONTACT	
控制面板	CONTROL PANEL	03
錯誤代碼	ERROR CODE	04
零件包 組裝配件	ACCESSORY KIT & ASSEMBLY DRAWING	05 - 06
組裝步驟	ASSEMBLING INSTRUCTION	07 - 22

注意事項

1. 本產品採用高品質、厚實穩固的結構鋼材與桌板所組成，為避免人身受傷或產品損壞，請至少雙人協同組裝。
2. 組裝過程請避免孩童靠近，避免發生碰撞或壓傷。
3. 台灣限用110V插座供電。
4. 本產品承重上限為100公斤，請勿超載使用。
5. 操作產品升降時，請確保桌面上方、下方與抽屜下方升降空間沒有孩童、寵物及任何障礙物。
6. 請勿讓孩童自行操作與清潔本產品。
7. 請勿倚靠、坐、站立在桌面或以任何不正常的方式使用。
8. 為確保使用安全，請定期檢查螺絲是否有鬆脫的現象。
9. 移動產品擺放位置時，為避免人身受傷或產品損壞，請至少雙人協同搬運，抬放時並請小心避免壓腳。
10. 產品進行搬運或者傾倒前，請先將桌腳降到最低(60公分)，避免升長的桌腳在移動過程中因受力不均而導致損壞。
11. 本產品僅適用於乾燥、平坦的室內環境，如遇擺放位置地面不平整，可旋轉腳墊使其穩固。
12. 如果控制盒沒有正確水平固定，會導致升降功能無法正常使用！

保固說明

保固期：DEFENDER 天行者 超跑電動升降桌 5年有限保固。
(5年：桌架總成 / 2年：升降馬達、電子控制總成、抽屜滑軌。)

非保固範圍條款：

1. 人為損壞、不正常使用或不可抗拒之天災人禍 (例如：風災、水患、火災、地震、戰爭、雷擊或異常電壓)。
2. 外觀材料的自然老化或正常磨損。
3. 產品序號有重貼、變造、毀損、無法辨識等情況。
4. 自行或委託未經原廠授權維修之廠商拆卸、改裝或更換非原廠零件。
5. 未按照使用說明書規定操作。
6. 產品本體以外的配件、說明書、包材。

清潔方式

1. 先以柔軟的毛巾或棉布沾清水，擰乾後進行擦拭，並避免水分滲入鋼材、電機元件而造成發霉、生鏽或短路。
2. 再以沒沾過水、完全乾燥的毛巾或棉布將表面徹底擦乾，避免表面殘留水分形成水痕、水漬。

客戶服務

產品功能、操作有任何問題，歡迎透過客服專線、信箱聯繫或加入火星犀牛FB粉絲專頁詢問。

WARNING

- Please wear protective gloves when assembling the Desk. It is your own responsibility to use appropriate protection to prevent any physical damage.
- All parts should be checked monthly to confirm their integrity and to make sure that the screws are not loose.
- If any part of the product is or appears to be damaged, do not use the product.

WARRANTY AGREEMENT

The product warranty period is calculated from date of purchase.
MarsRhino warrants that the product will not have any material or quality defects during the warranty period. If a product requires warranty service, proof of purchase (purchase receipt or invoice) must be produced during the warranty period.

MarsRhino's warranty is limited to providing new parts to repair the product.
When the product cannot be repaired, it may be exchanged for a product with the identical model number. If the product is no longer produced or unavailable, a product with similar functions or specifications may be substituted. The warranty period of the exchanged product is the original product's remaining warranty period, or 90 days, whichever is longer.

This warranty is subject to local laws and regulations.
You also enjoy locally-granted warranty rights.

WARRANTY NOT APPLICABLE

- Where there has been human error, abnormal use, or force majeure (e.g., storm, flood, fire, earthquake, war, lightning, electrical surges, etc.).
- Damage that naturally and inevitably occurs as a result of normal wear or aging.
- When the product number is reused, modified, damaged, illegible, etc.
- Where there has been disassembly, modification, or replacement of original parts, either oneself or by a merchant not authorized by the original manufacturer.
- Where the product has been used in a manner not in accordance with the instructions.
- To accessories, instructions, and packaging other than the product itself.

HOW TO CLEAN THE ELECTRIC DESK?


Please wipe with a towel or cotton cloth dampened with clean water, and avoid excessive water infiltration into the desk and cause mold or rust.

CUSTOMER SERVICE


Please contact the retailer where you purchased the product first, If you still cannot solve the problem, please contact us at the following email address.

Email: rma@marsrhino.com

控制面板 CONTROL PANEL

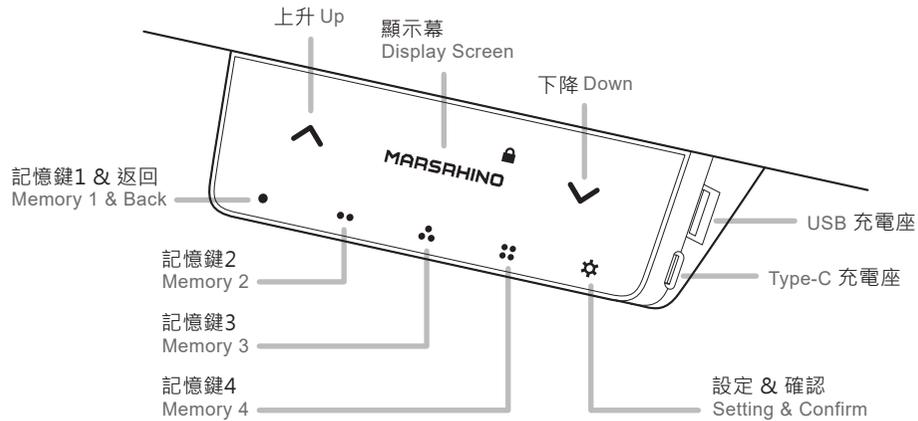

休眠模式 SLEEP MODE

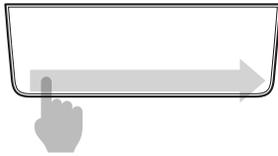

停止操作10秒後，螢幕會全部熄滅，進入休眠模式。由左向右輕滑面板下方，即可喚醒螢幕。

After no operation for 10 seconds, the screen will turn off completely and enter sleep mode. To operate, slide your finger lightly from left to right at the bottom of the panel.

鎖定模式 LOCK MODE



畫面出現 圖標為鎖定模式。由左向右輕滑面板下方，即可解除鎖定模式。

The screen displays the (locked) icon in lock mode. To unlock the mode, slide your finger lightly from left to right at the bottom of the panel.

操作模式 OPERATING MODE



解除鎖定模式後即可開始操作。此時輕按 或 鍵，畫面中間即會顯示高度數字。

After unlocking the mode, you can start operating. Press the (Up) or (Down) button lightly, and the height number will appear on the screen.

1. : 上升、下降鍵 UP AND DOWN

可自由調節上升、下降高度，升降範圍在60~125公分(不含桌板厚度)。

Adjust the up and down heights freely. The lifting range is from 60 to 125 cm (excluding the thickness of the tabletop).

2. Height 1-4 : 高度記憶 MEMORY SYSTEM

1. 先將桌子手動上升或下降到想要記憶的高度。

2. 按一下 設定鍵後螢幕(高度數字)會開始閃爍，再點選 記憶鍵3，螢幕顯示 **Height 3** 即把當下高度設定為記憶鍵3。(若點選記憶鍵1，螢幕顯示 Height 1 即是把當下高度設定為記憶鍵1，以此類推)

1. First, raise or lower the table to the desired memory height.

2. Press the (Setting Button), and the screen (Height Number) will start flashing. Then click (Memory Button 3), and the screen displays (Height 3) to set the current height as memory button 3.

(If you click Memory Button 1, the screen displays (Height 1), setting the current height as Memory Button 1, and so on.)

3. : 進階功能 ADVANCED FUNCTIONS

長按 設定鍵5秒，即可進入進階功能設定，並使用 上下鍵來進行功能類別選擇。

Press and hold the (Setting Button) for 5 seconds to enter advanced function settings and use the up and down buttons to select the function category.

按一下 設定鍵即可進入功能類別操作，並使用 上下鍵來進行翻頁。

After selecting the function category, press the (Setting Button) once to enter the function category operation and use the up and down buttons for further selection.

選擇好欲設定的功能再按一下 設定鍵，畫面出現 即完成設定。操作過程按一下 返回鍵即可返回上頁。

After choosing the desired setting, press the (Setting Button) again, and the screen displays a (checkmark icon) to complete the setting. Press the (Back Button) once to return to the previous page during the operation process.

3-1. Hgt lim : 高度限制 HEIGHT LIMIT

Clean all 刪除設定 / **Lowest** 最低限制 / **Highest** 最高限制

Clear Settings: Lowest / Highest

3-2. Unit : 單位設定 UNIT SETTING

cm 公分 / inch 英吋

3-3. Gyroscope : 陀螺儀設定 GYROSCOPE SETTING

Disable 關閉 / Level:1~8 (靈敏度低至高)

Level:1~8 (lowest sensitivity ~ highest sensitivity)

3-4. P Up : 上升防夾設定 UPWARD ANTI-PINCH SETTING

Disable 關閉 / Level:1~8 (靈敏度低至高)

Level:1~8 (lowest sensitivity ~ highest sensitivity)

3-5. P Down : 下降防夾設定 DOWNWARD ANTI-PINCH SETTING

Disable 關閉 / Level:1~8 (靈敏度低至高)

Level:1~8 (lowest sensitivity ~ highest sensitivity)



3-6. General : 工程設定 ENGINEERING SETTING

無法進入，僅限原廠工程師操作



Cannot be entered, limited to factory engineer operation

錯誤代碼 ERROR CODE	代碼說明 ERROR CODE EXPLANATION	對應操作 CORRESPONDING OPERATION FOR ERROR CODE
E05	防夾功能啟動 Anti-pinch Function Activated	移除障礙物後即可正常使用。 Can be used normally after removing obstacles.
E06	供電異常 Power Supply Abnormal	檢查控制盒的電源線接頭是否鬆脫，或重新查拔電源線。 Check whether the power cord connector of the control box is loose or reinsert the power cord.
E18 / E28	超載運行 Overload Operation	減少桌面載重後即可正常使用。 Can be used normally after reducing desktop load.
HOT	電機系統過熱保護 Overheat Protection	停止操作靜待約20分鐘後，即可正常使用。 Stop operating and wait for about 20 minutes to resume normal use.
E04 / E11 / E13 E14 / E17 / E21 E23 / E24 / E27 E40 / E41	線路連接異常 Abnormal Circuit Connection	請先拔除電源線，檢查全機線路是否正確連接，確定線路連接無誤，再重新插電確認是否可正常操作。 Please first unplug the power cord, check whether the entire machine circuit is connected properly, confirm that the circuit connection is correct, and then plug in the power cord again to check whether normal operation is possible. 如經過上述處理還是無法正常操作，請即停止使用！並聯繫官方客服進行檢測。 If above solutions still cannot fix the error, please turn OFF the power and contact the customer service for testing arrangements.


零件包 **ACCESSORY KIT**

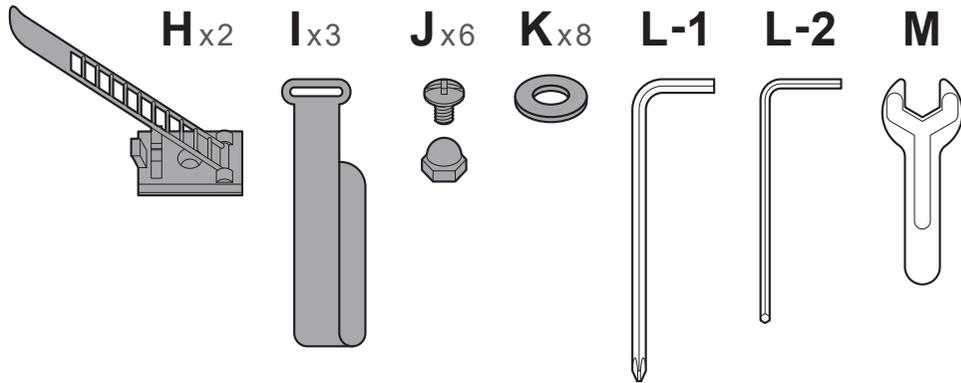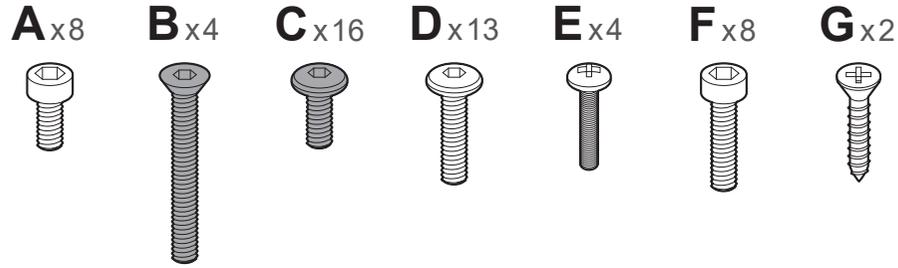

組裝配件 **ASSEMBLY DRAWING**

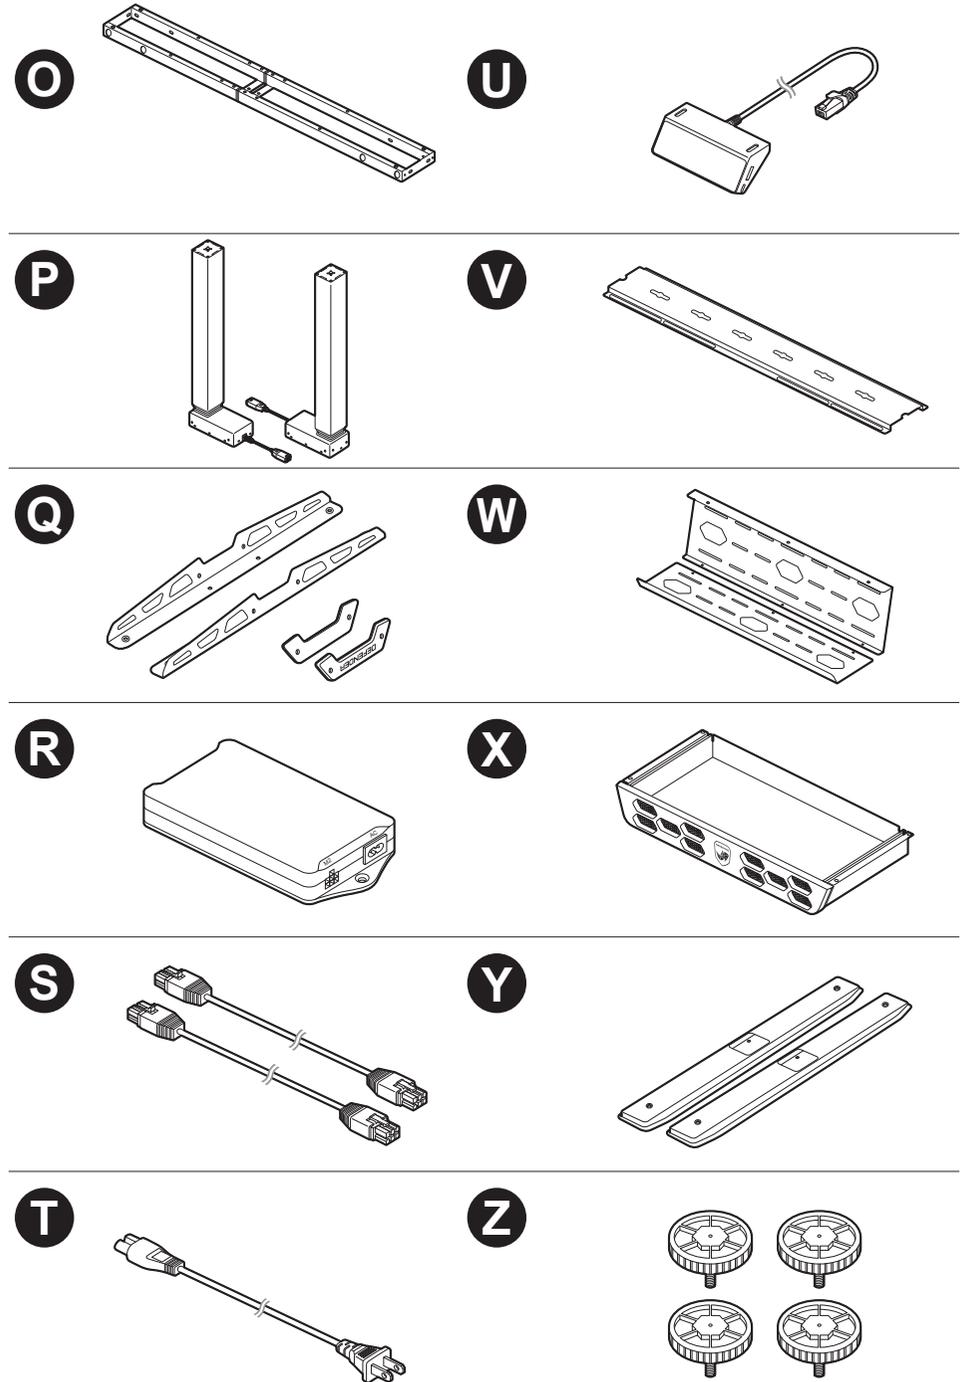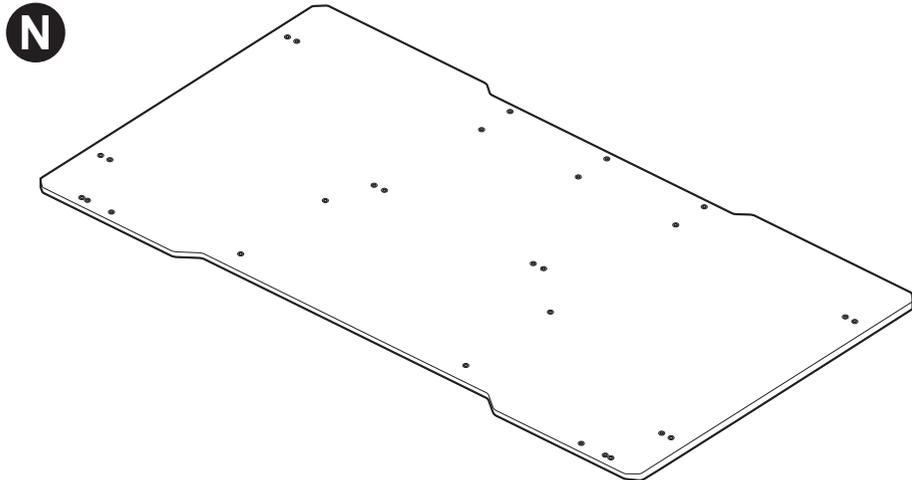

1

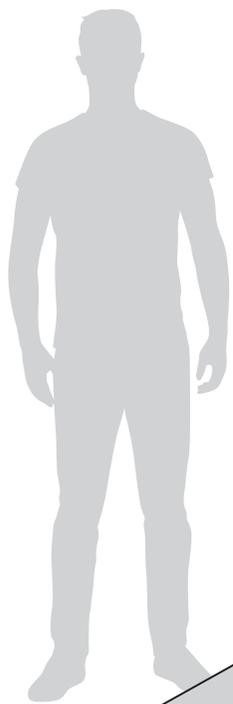


建議雙人進行組裝。
Recommended two people to assemble.




組裝前先請詳閱說明書，
並核對組裝零配件是否齊全。
Please read this manual
carefully before installing.



組裝螺絲時請確實鎖緊，
避免產生搖晃與異音。
Be sure to tighten the
screws firmly

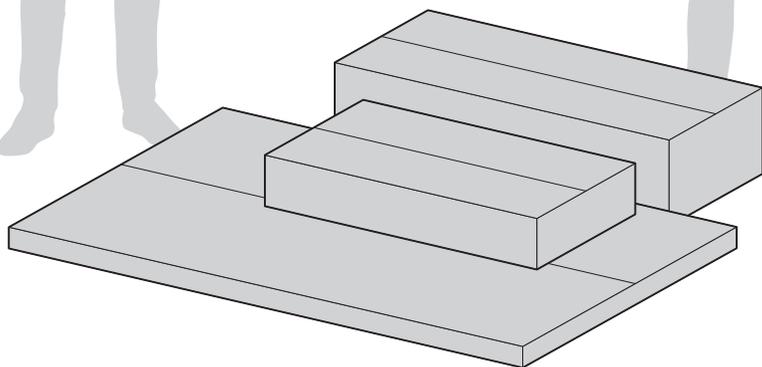


2

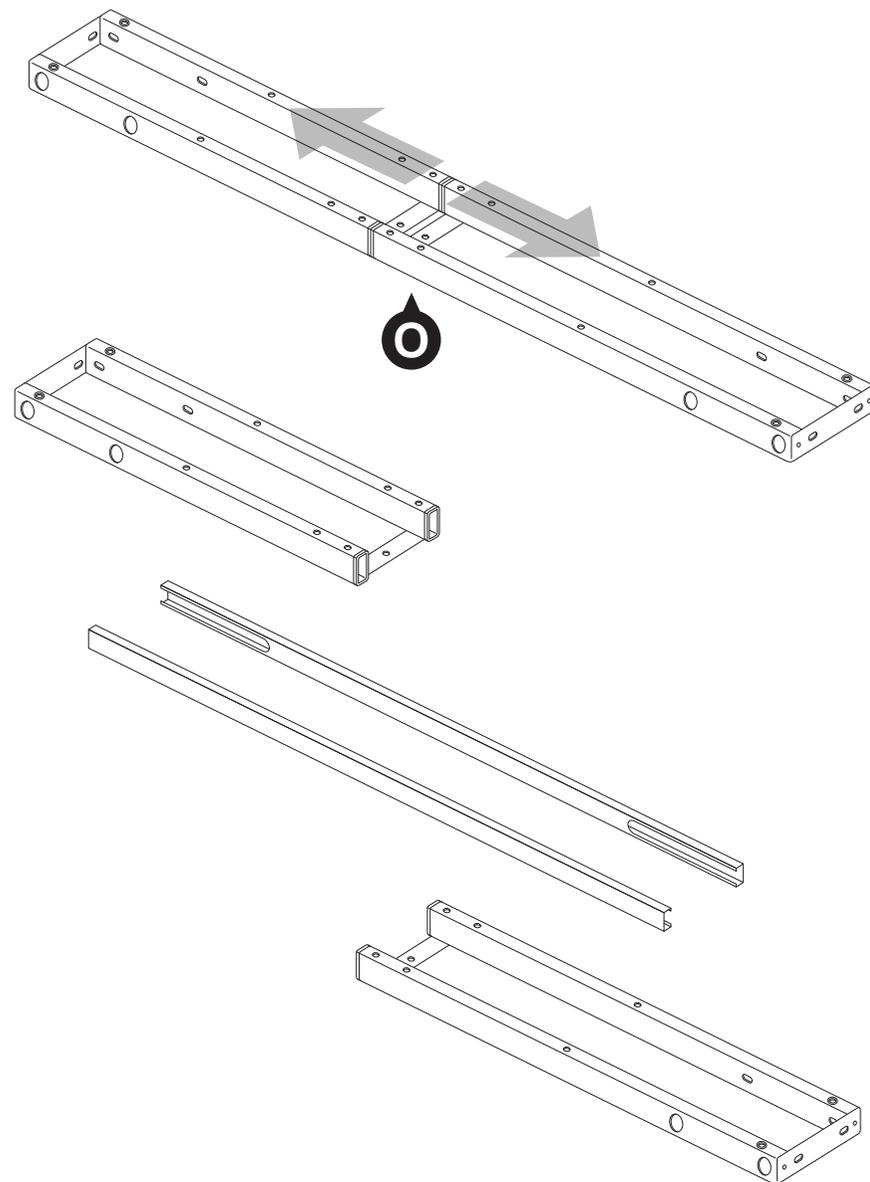


3


3-1

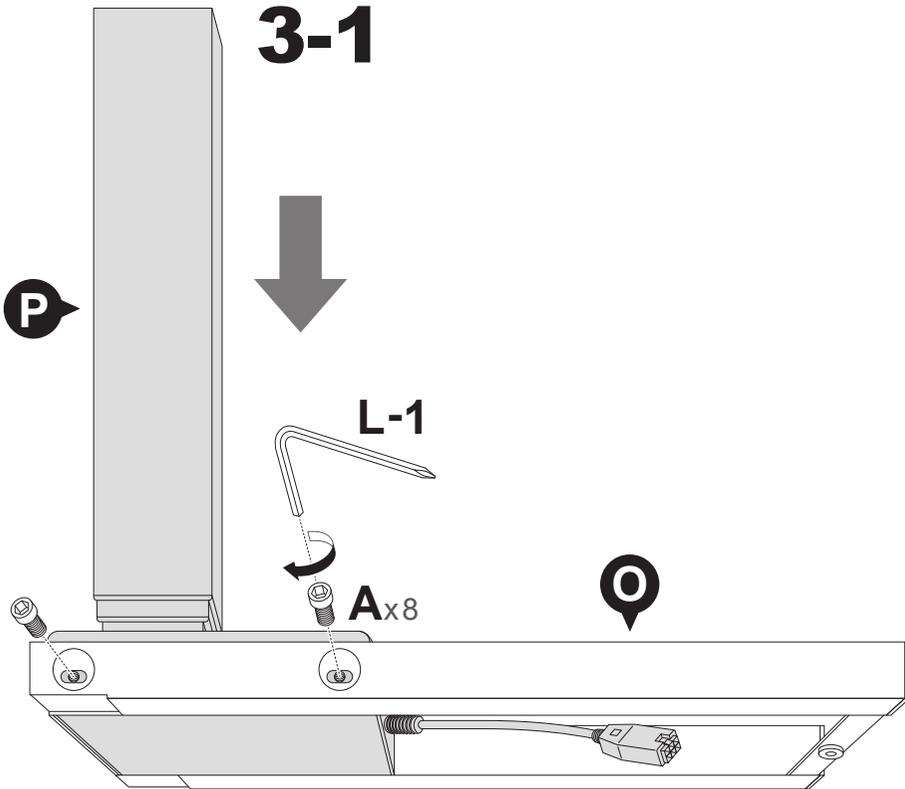

3-2

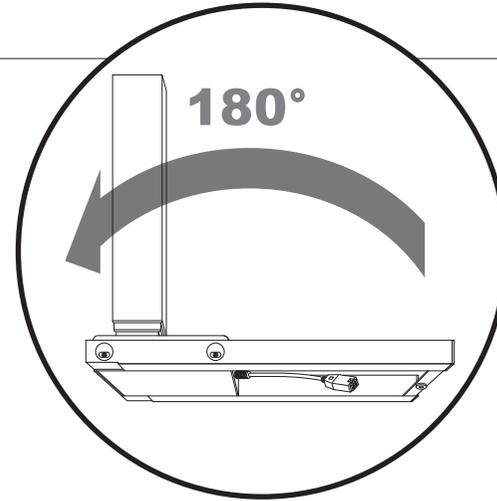

3-3

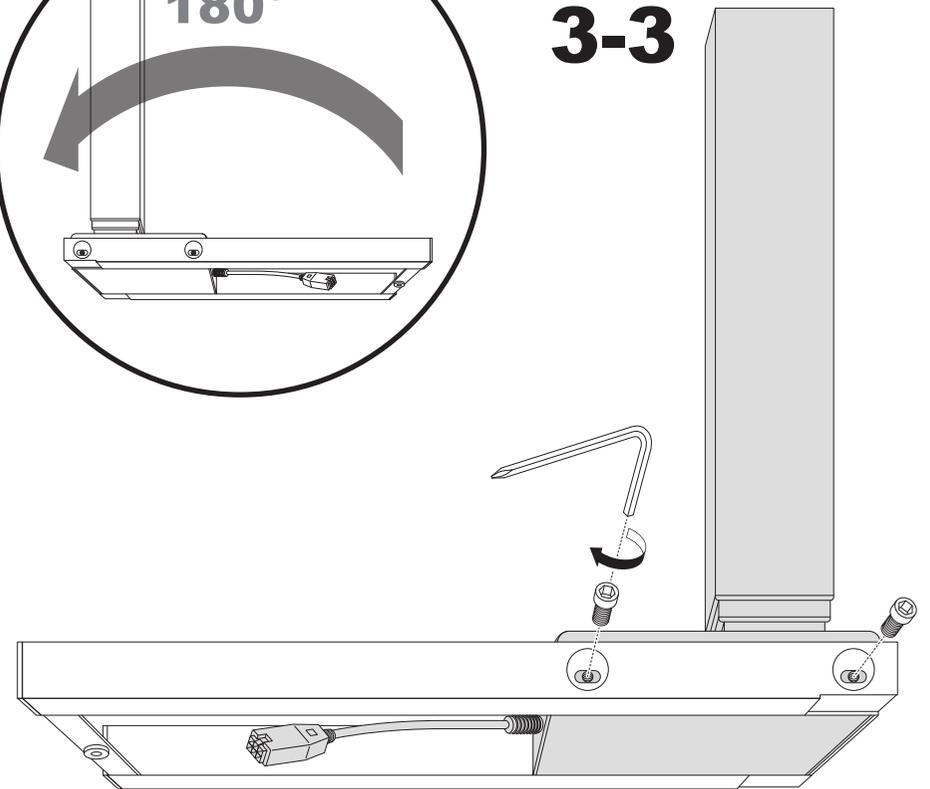

The same assembly method for both left and right side.




Be sure to tighten the screws firmly



請把紙箱內的珍珠棉片鋪在地板，避免碰撞。
Please place EPE foam on the floor before proceeding the assembly.

4

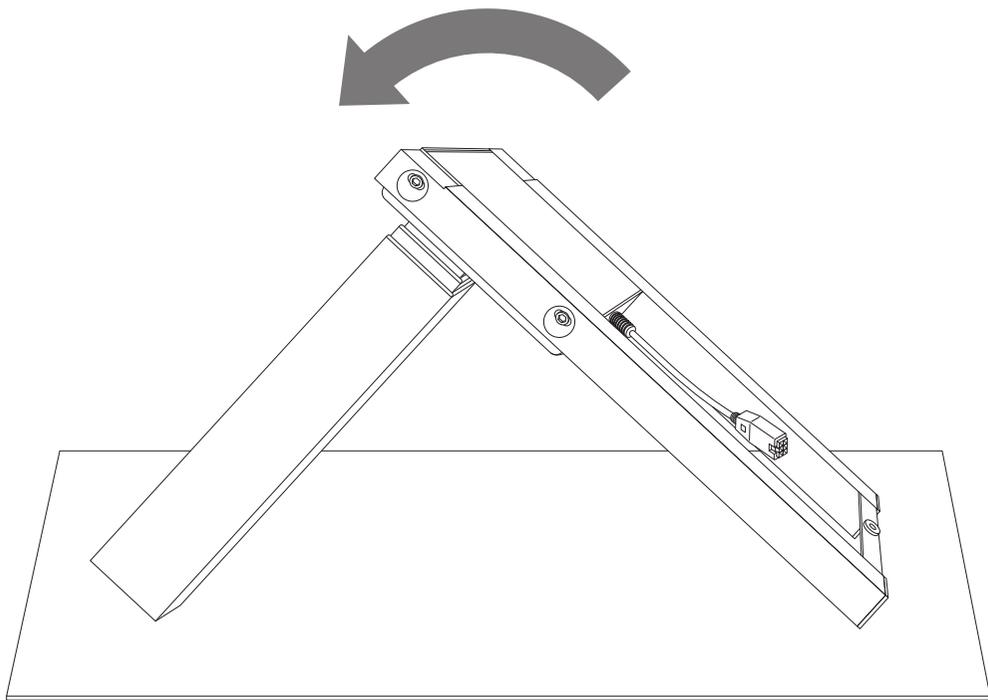

請把紙箱內的珍珠棉片鋪在地板，避免碰撞。
Please place EPE foam on the floor before proceeding the assembly.

5




兩側組裝
方式相同




請確實鎖緊
螺絲
Be sure to
tighten the
screws firmly

5-1

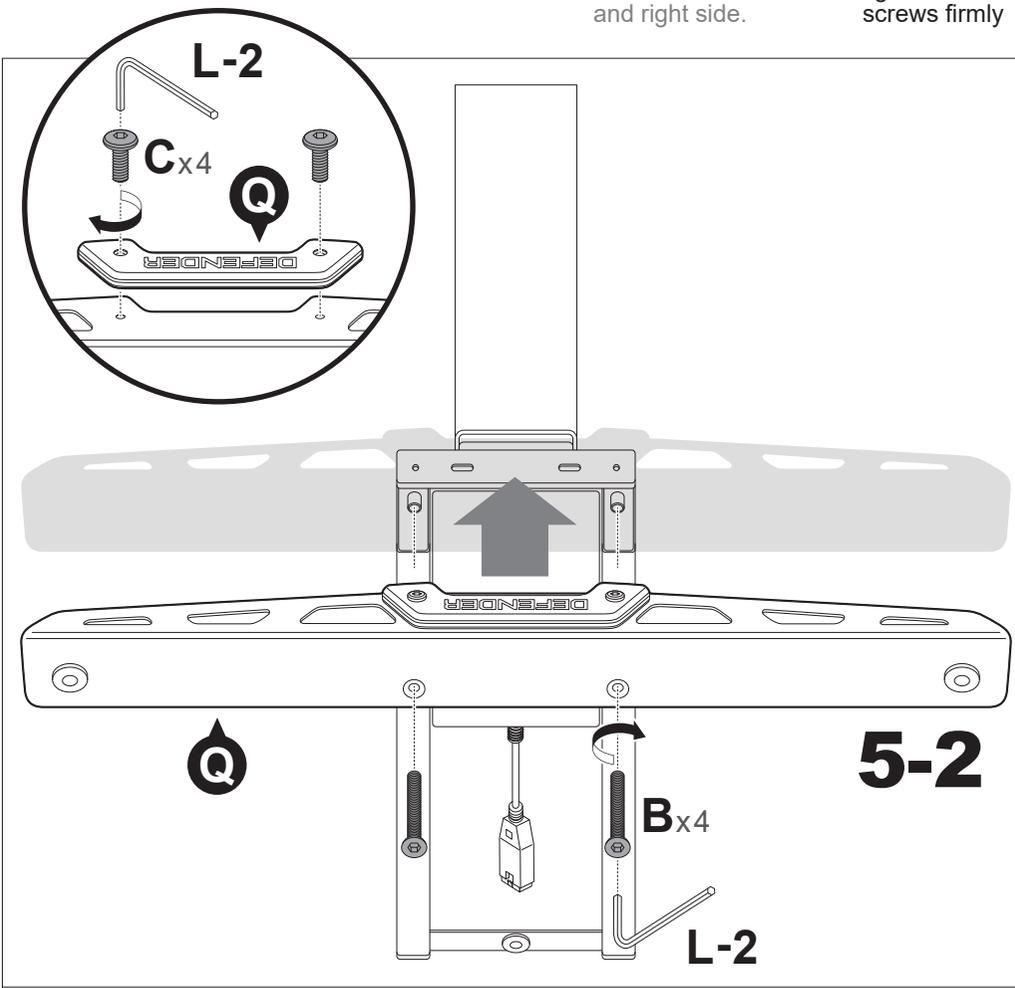


6

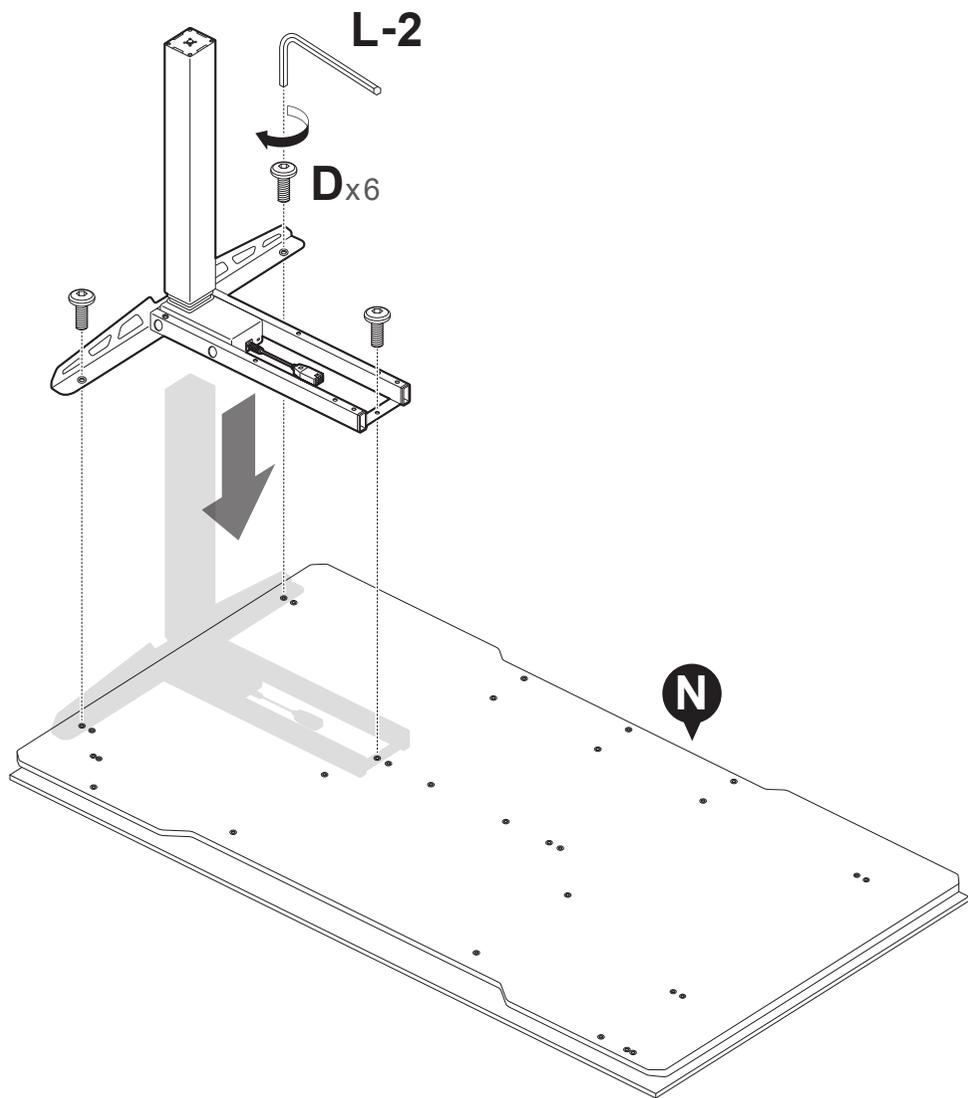


請把紙箱內的珍珠棉片鋪在地板，避免碰撞。
Please place EPE foam on the floor before proceeding the assembly.

7

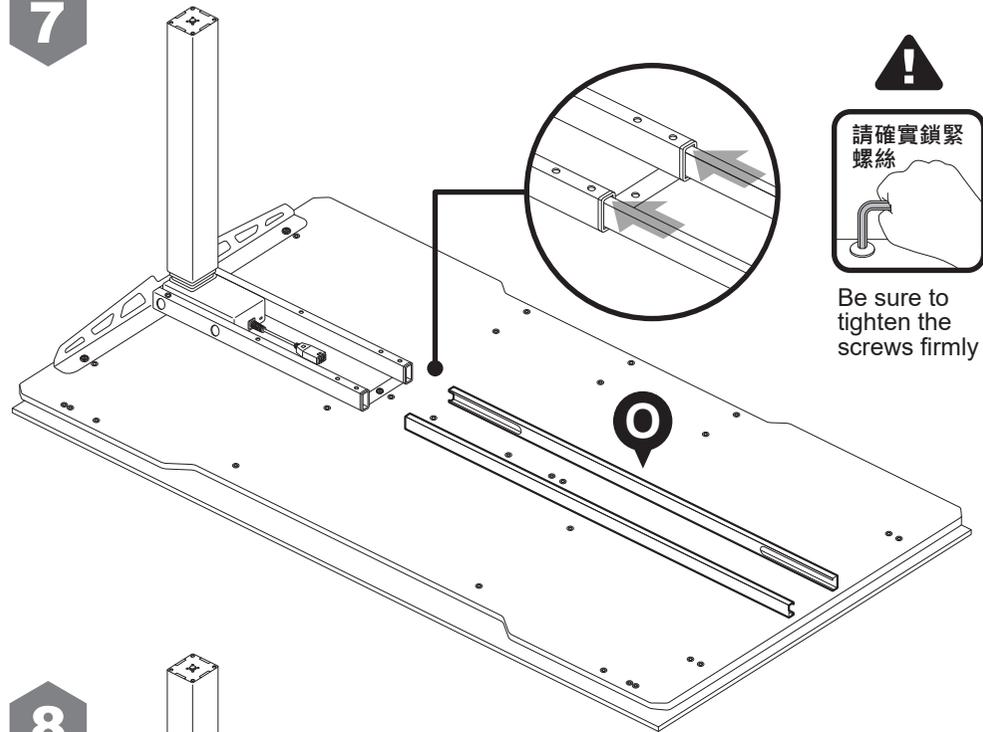


請確實鎖緊螺絲
Be sure to tighten the screws firmly


8

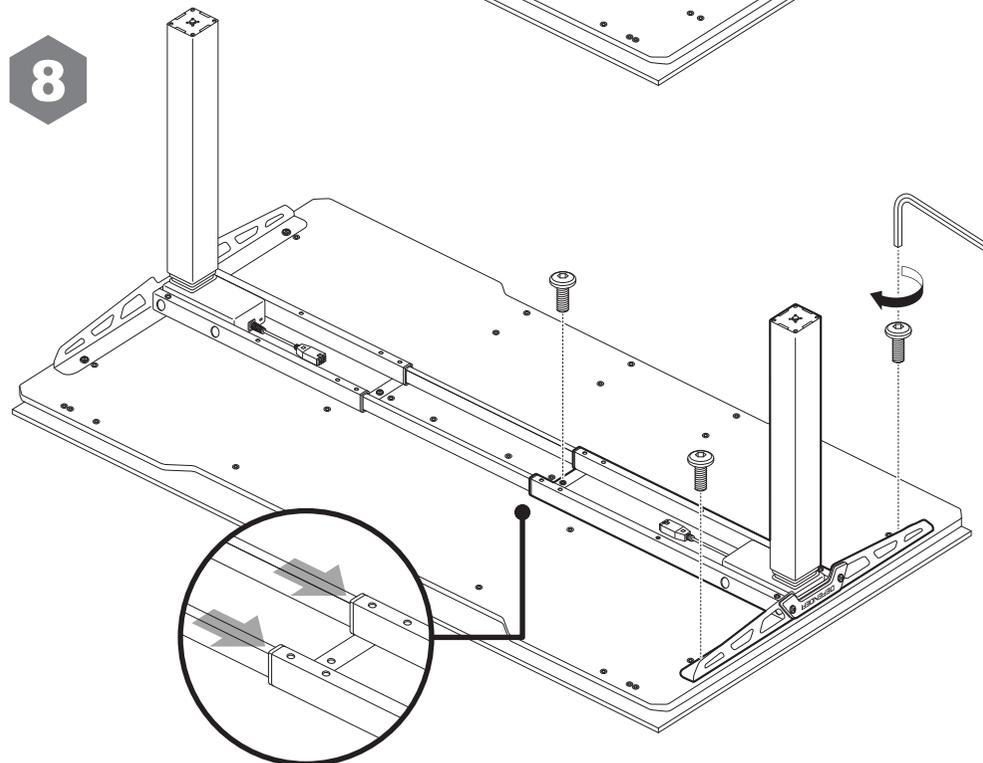



9

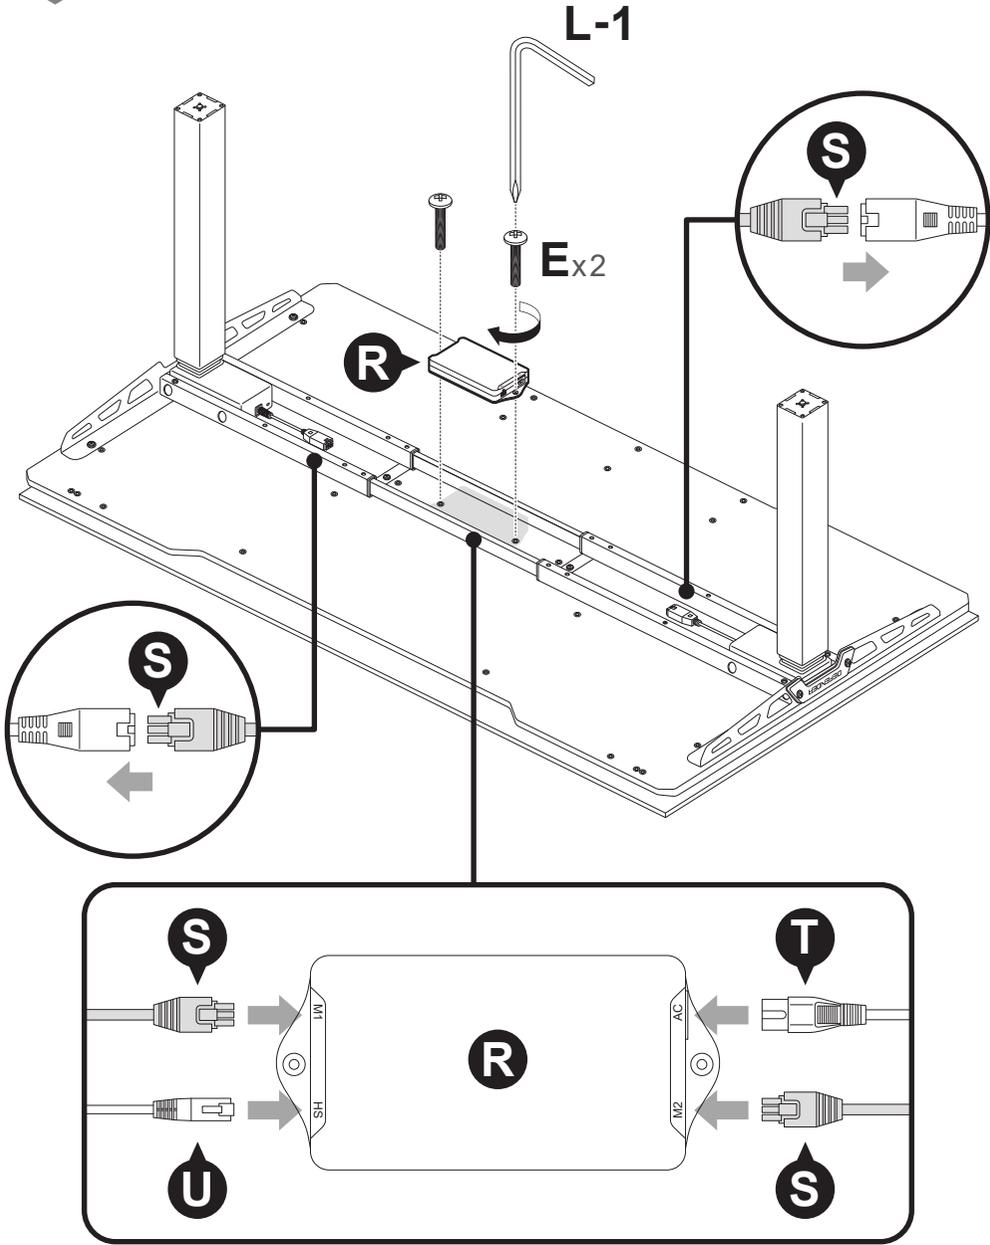


10

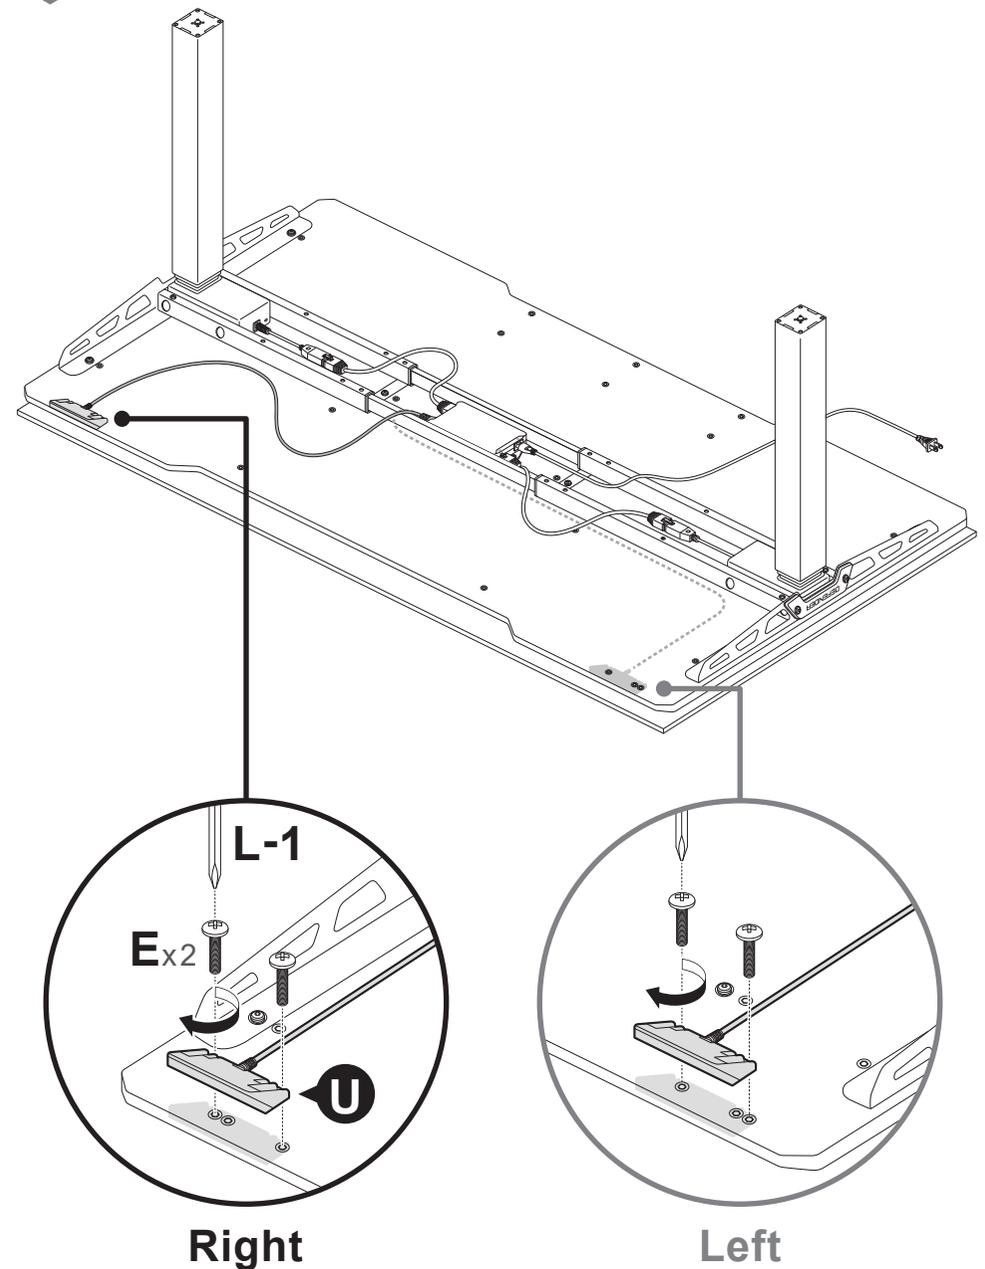

11

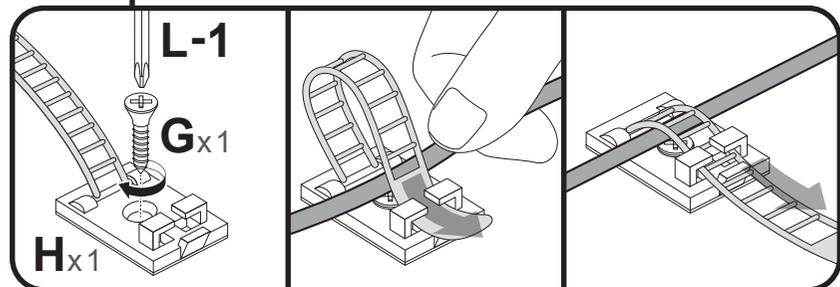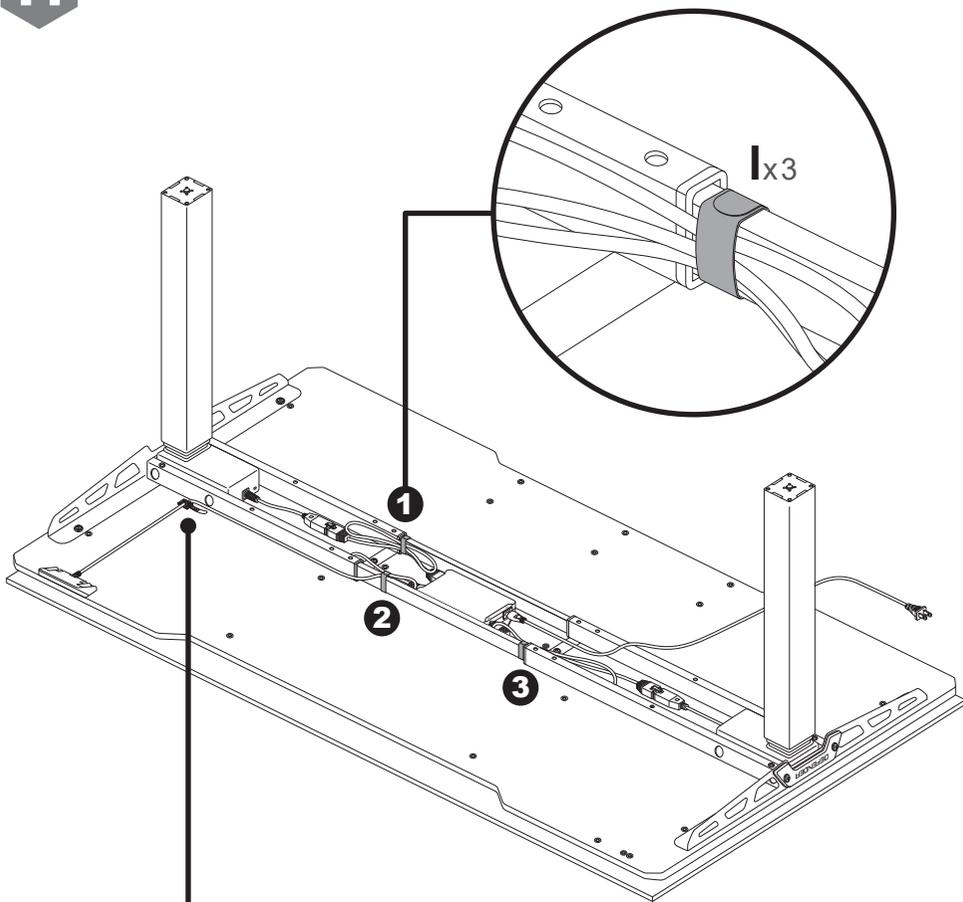


12

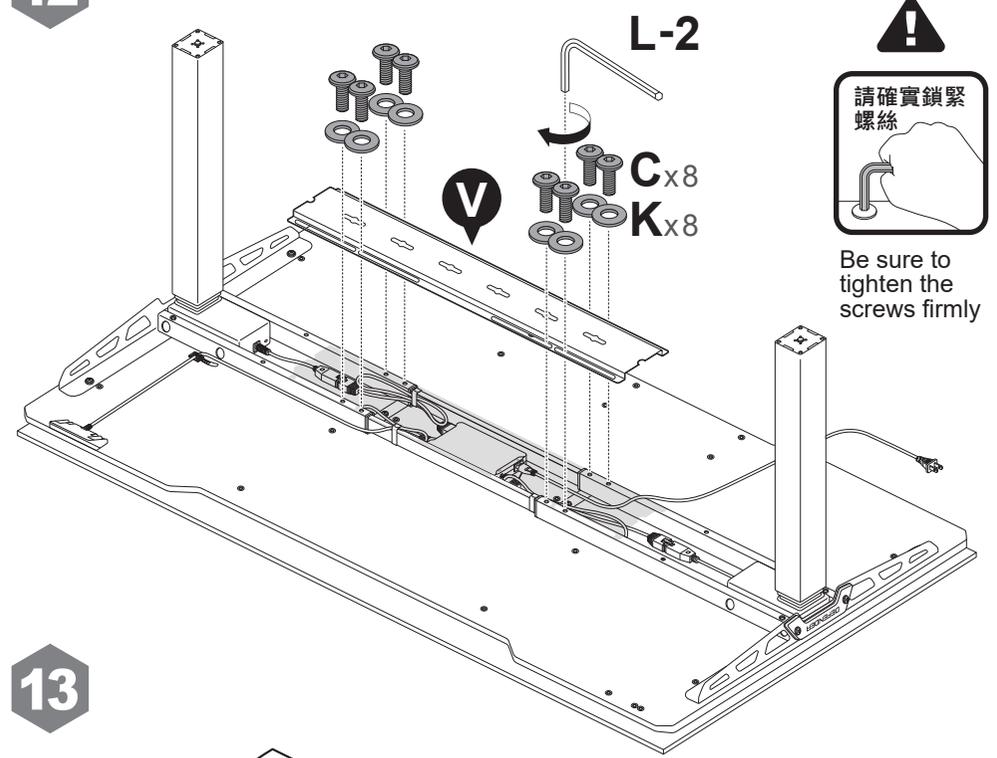


請確實鎖緊螺絲

Be sure to tighten the screws firmly

13

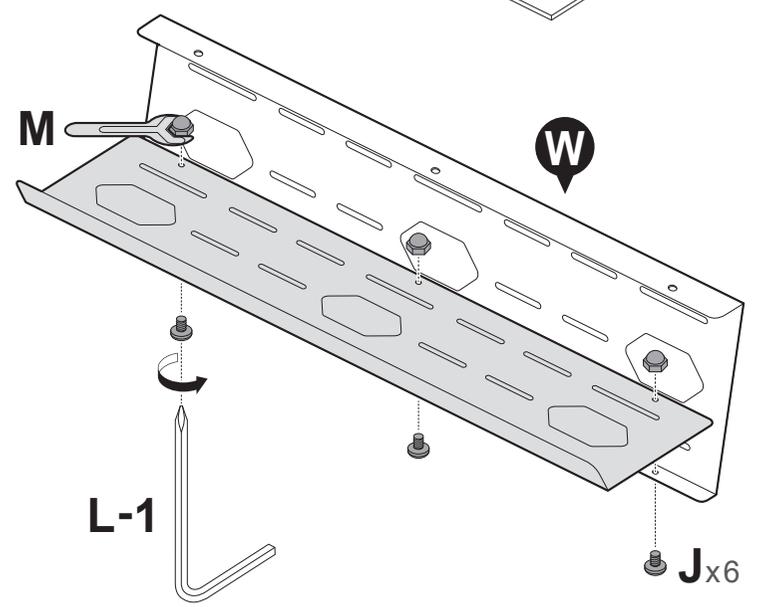


14

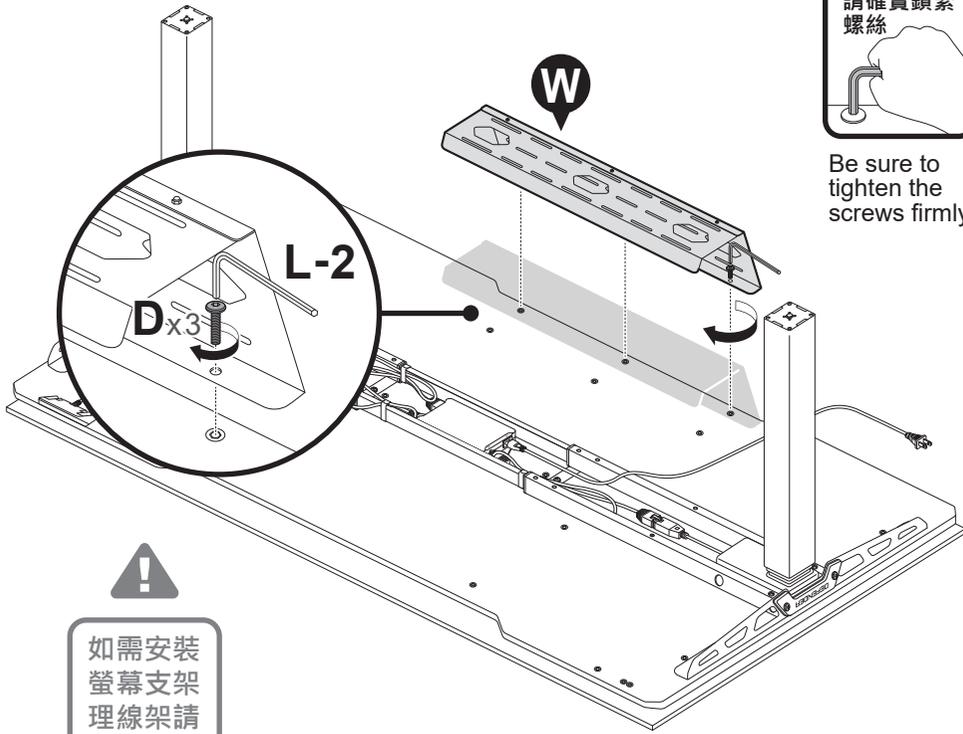


Be sure to tighten the screws firmly

如需安裝
螢幕支架
理線架請
往前安裝


If you need to install the screen bracket

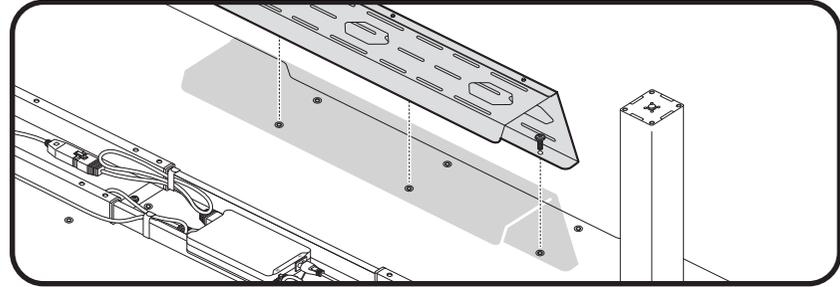

15

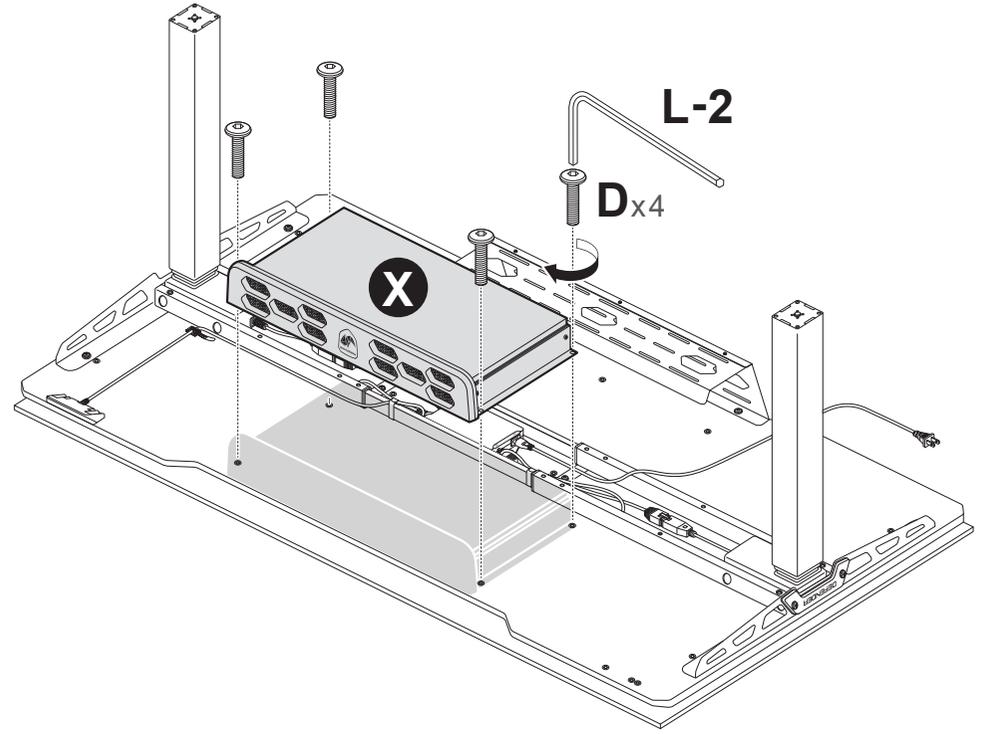

16

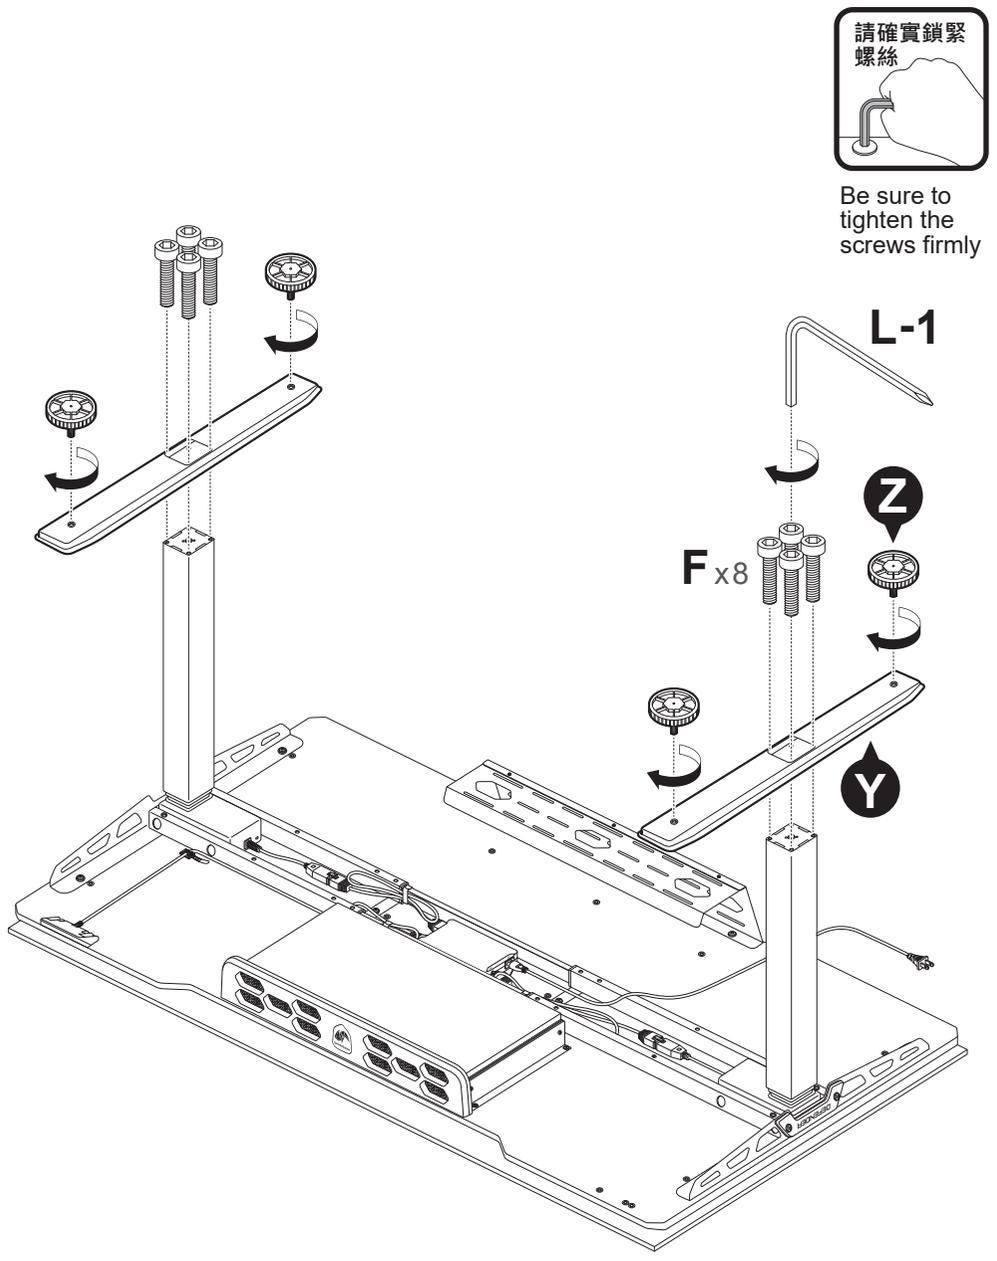

17

