



INFINITE One

ERGONOMIC GAMING CHAIR
無限ONE 超跑人體工學椅

ENGLISH

- WATER-REPELLENT ELASTIC FABRIC
- HIGH-DENSITY FOAM
- MESH FABRIC
- ADJUSTABLE HEADREST & LUMBAR SUPPORT
- 4D ADJUSTABLE ARMREST
- LOAD CAPACITY 150kg

РУССКИЙ

- ВОДООТТАЛКИВАЮЩАЯ ЭЛАСТИЧНАЯ ТКАНЬ
- ПЕНА ВЫСОКОЙ ПЛОТНОСТИ
- СЕТКА ТКАНЬ
- РЕГУЛИРУЕМЫЙ ПОДГОЛОВНИК И ПОЯСНИЧНАЯ ОПОРА
- 4D РЕГУЛИРУЕМЫЙ ПОДЛОКОТНИК
- ГРУЗОПОДЪЕМНОСТЬ 150кг

ESPAÑOL

- TEJIDO ELÁSTICO REPELENTE AL AGUA
- ESPUMA DE ALTA DENSIDAD
- TELA DE MALLA
- REPOSACABEZAS Y SOPORTE LUMBAR AJUSTABLE
- APOYABRAZOS AJUSTABLE 4D
- CAPACIDAD DE CARGA 150kg

PORTUGUÊS

- TECIDO ELÁSTICO REPELENTE DE ÁGUA
- ESPUMA DE ALTA DENSIDADE
- TECIDO DE MALHA
- SUPORTE AJUSTÁVEL DE CABEÇA E LOMBAR
- 4D APOIO DE BRAÇO AJUSTÁVEL
- CAPACIDADE DE CARGA 150kg

日本語

- 撥水伸縮性生地+高密度フォーム+メッシュ生地
- 調整可能なヘッドレストとランバーのサポート
- 4D調整可能なアームレスト
- 耐荷重150kg

한국어

- 발수성 탄성 직물+고밀도 거품+메쉬 원단
- 조절 가능한 머리 받침 및 오추 지지대
- 4D 조절 식 팔걸이
- 적재 능력 150kg

繁體中文

- 防潑水彈性布+高密度泡棉+透氣網布
- 可調式頭枕與腰靠
- 4D扶手
- 承重150公斤

简体中文

- 防泼水弹性布+高密度泡棉+透气网布
- 可调式头枕与腰靠
- 4D扶手
- 承重150公斤

WARRANTY CONDITIONS

Product : INFINITE ONE SERIES ERGONOMIC GAMING CHAIR

The product warranty period is calculated from date of purchase. MarsRhino warrants that the product will not have any material or quality defects during the warranty period. If a product requires warranty service, proof of purchase (purchase receipt or invoice) must be produced during the warranty period.

MarsRhino's warranty is limited to providing new parts to repair the product. When the product cannot be repaired, it may be exchanged for a product with the identical model number. If the product is no longer produced or unavailable, a product with similar functions or specifications may be substituted. The warranty period of the exchanged product is the original product's remaining warranty period, or 90 days, whichever is longer.

This warranty is subject to local laws and regulations. You also enjoy locally-granted warranty rights.

WARRANTY NOT APPLICABLE

- Where there has been human error, abnormal use, or force majeure (e.g., storm, flood, fire, earthquake, war, lightning, electrical surges, etc.).
- When the product number is reused, modified, damaged, illegible, etc.
- Where there has been disassembly, modification, or replacement of original parts, either oneself or by a merchant not authorized by the original manufacturer.
- Where the product has been used in a manner not in accordance with the instructions.
- To accessories, instructions, and packaging other than the product itself.

WARNING


- Please wear protective gloves when assembling the chair. It is your own responsibility to use appropriate protection to prevent any physical damage.
- Pay attention to your hand's position and keep it away from spaces in which it could get caught or be injured.
- Keep in mind that this chair is designed only for sitting and reclining, and that it should be used only for those uses.
- Do not sit on the edge of the chair or the arm rests.
- When the chair is moving, please do not touch any of the chair's adjustment controls to prevent affecting its stability and causing a potentially dangerous fall.
- When reclining the chair, please keep both feet on the ground, as well as abstain from any violent, rough or strong movement which could cause the chair to tip over.
- Do not place the chair in a location in which it is likely to be subjected to prolonged sunlight exposure. The product's colors might fade when exposed to sunlight.
- Do not use abrasive products or scrub energetically when cleaning. Please stick to gentle products suitable for delicate materials.
- If any part of the product is damaged, missing or loose, please contact the local distributor and do not use the product.

CUSTOMER SERVICE

Please contact the retailer where you purchased the product first, If you still cannot solve the problem, please contact us at the following email address.
Email: rma@marsrhino.com

www.marsrhino.com

2D可調式頭枕 2D ADJUSTABLE HEADREST

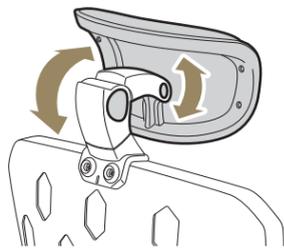


如何清潔人體工學椅

請以毛巾或棉布沾清水進行擦拭，並避免過多水分滲入椅子造成發霉生銹。

HOW TO CLEAN THE ERGONOMIC CHAIR?

Please wipe with a towel or cotton cloth dampened with clean water, and avoid excessive water infiltration into the chair and cause mold or rust.


椅座高度調整 HEIGHT LIFT

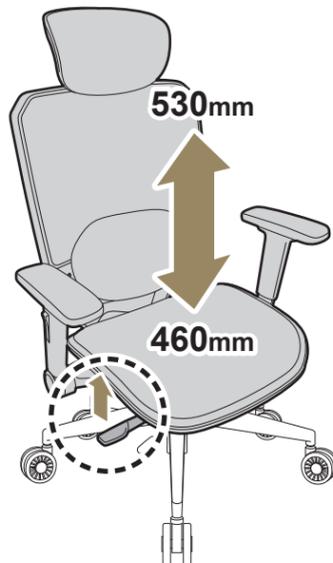

椅座前後調整 SLIDING SEAT



椅背傾仰調整 SEAT TILT & LOCK PADDLE

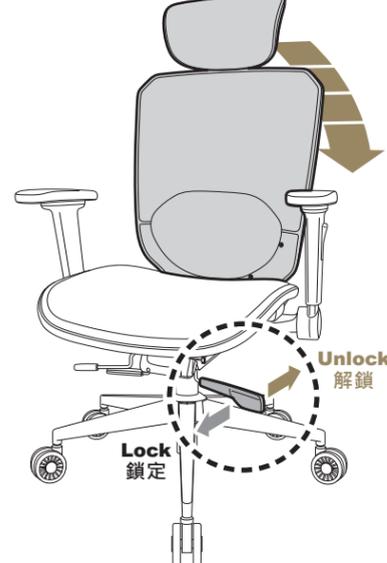


鎖定傾仰 HOW TO LOCK THE POSITION OF THE BACKREST



1 Unlock 解鎖

2 100-130° 4段角度選擇 4 Position Lock

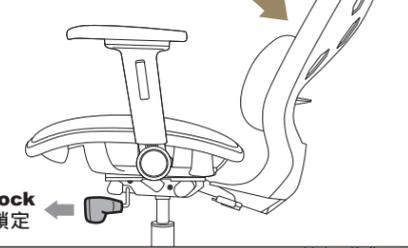

3 Lock 鎖定




調整椅背傾仰時，請勿伸手到椅背和椅座的縫隙，避免意外夾手。
Pinch points keep hands clear.

解除傾仰 HOW TO UNLOCK THE POSITION OF THE BACKREST



1 Unlock 解鎖

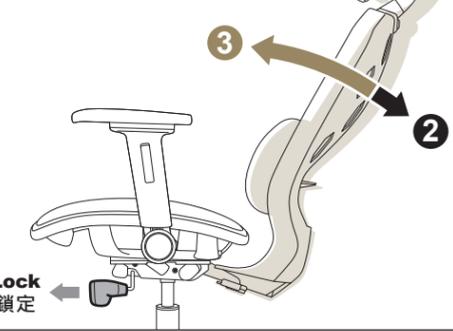



4 Lock 鎖定




椅背防回彈安全設計
SECURITY DESIGN

解鎖後，需再往後靠輕壓椅背，聽到“嗒”聲即可解除鎖定，回正椅背。
Lean back into seat to unlock backrest.

4D可調式扶手 4D ADJUSTABLE ARMREST

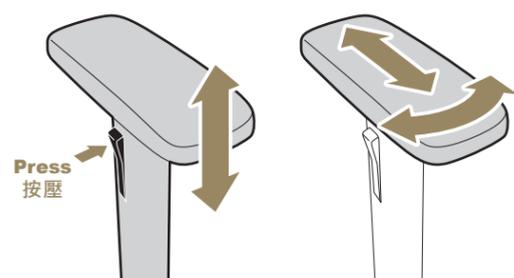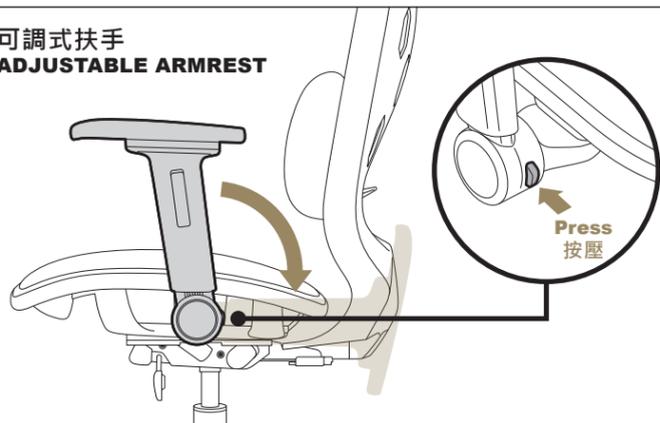


體感腰靠 ADJUSTABLE LUMBAR SUPPORT

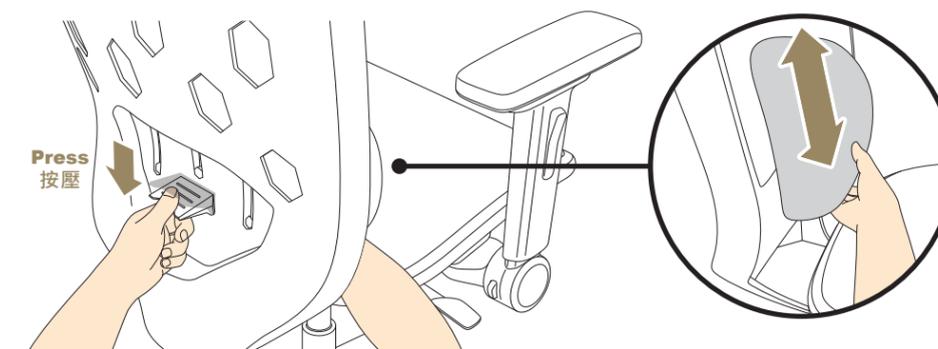

一手將椅背後方(撥片)向下按住，另一手同時調整腰靠高低。
Adjust lumbar support height.

組裝配件 ASSEMBLY DRAWING

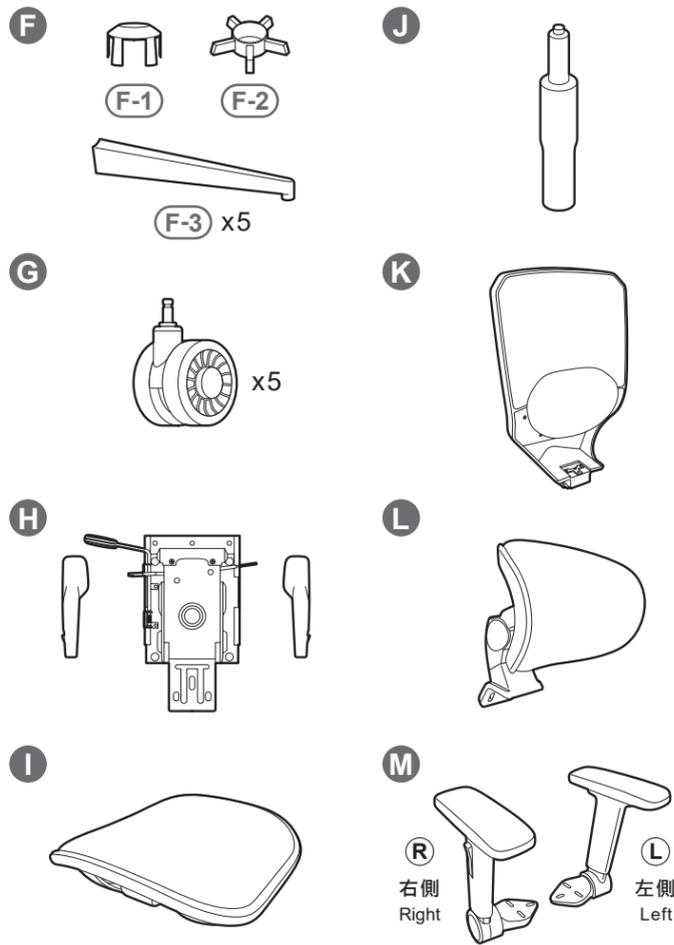

1

建議雙人進行組裝。
Recommended two people to assemble.

組裝前先請詳閱說明書，
並核對組裝零配件是否齊全。
Please read this manual carefully before installing.

組裝螺絲時請確實鎖緊，
避免產生搖晃與異音。
Be sure to tighten the screws firmly

2

F-2, F-3 x5

E-1, **B** x5

請確實鎖緊螺絲
Be sure to tighten the screws firmly

3

F-1

G x5

4

SEAT HEIGHT ADJUSTMENT
UP ↑ DOWN ↓

TILT UNLOCK FWD ↑
LOCK BWD ↓

請把撥片插到底，並聽到“嗒”聲，才有確實卡緊。
Insert until it clicks into place.


5

請確實鎖緊螺絲
Be sure to tighten the screws firmly

E-2, **A** x4

向前 FRONT

零件包 ACCESSORY KIT

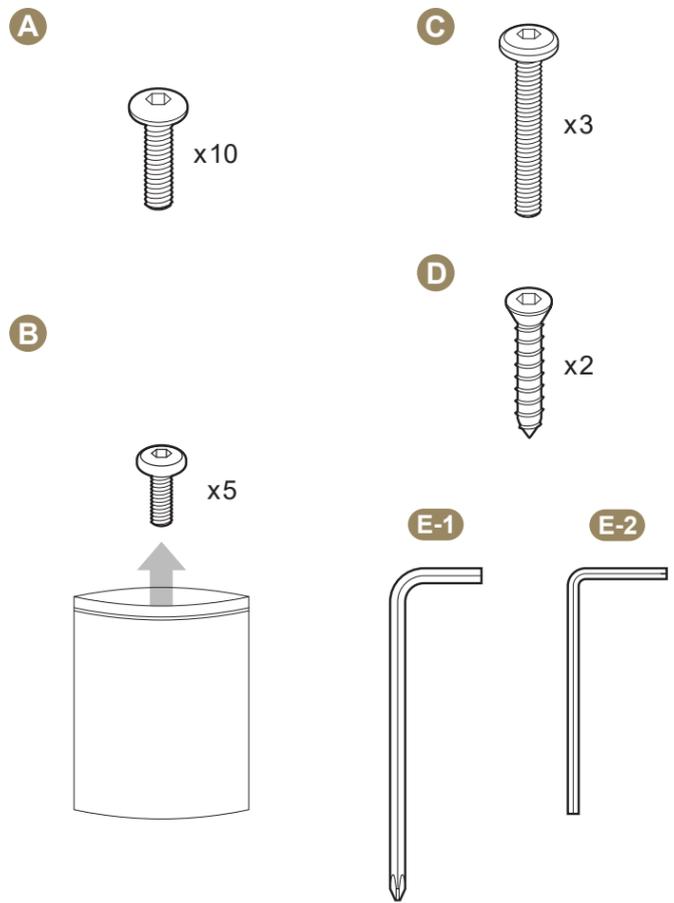

6

J

請小心把椅子向前傾倒，讓椅座前緣支撐地面。
Gently set it facing downwards.

7

請小心把椅子向前傾倒，讓椅座前緣支撐地面。
Gently set it facing downwards.

請把紙箱內的珍珠棉片鋪在地板，再進行組裝避免髒污。
Please place EPE foam on the floor before proceeding the assembly.

E-1, **C** x3

請確實鎖緊螺絲
Be sure to tighten the screws firmly

8

請確實鎖緊螺絲
Be sure to tighten the screws firmly

M **L** 左側 Left, **M** **R** 右側 Right

A x6, **E-2**

9

請小心把椅子立起。
Carefully tilt the chair into an upright position.

10

請確實鎖緊螺絲
Be sure to tighten the screws firmly

D x2, **E-2**